## How to Setup the DMZ option of the C100BRS4

## Note!

When you want to forward a certain port to be redirected (forwarded) to a certain computer in the LAN network you first have to configure that computer with fixed TCP/IP settings so you will have one IP to forward the port to that will not change.

## Example:

P	: 192.168.1.200
Subnet mask	: 255.255.255.0
Gateway	: 192.168.1.254
DNS	: 192.168.1.254

1. Login to the router by typing the IP address in your browser

🗿 al	oout:b	olank -	Microsoft	Intern	et E
Eile	<u>E</u> dit	⊻iew	F <u>a</u> vorites	<u>I</u> ools	Hel
G	Back	• 6	) - 💌	2	
Addre	ss	http://	192.168.1.2	54	

2. Click **OK** (standard = no username and password)

Connect to 19	2.168.1.254
User name: Paceword:	
	Bemenber ny password OK Cancel

3. Go to Virtual Server



4. Fill in the IP of the computer that you like to configure DMZ for (like 192.168.1.200 in the example)

15		~		1
14	TCP	~	>	1
15	TCP 💌	~	>	1
	10. A dalara ar 40	0.400.4	1	
DMZ	IP Address: 19	12 168 1 200		
		2.100.1. 200	1	
⊃Se	c Pass Through	n Address: 192.16	8.1.	
PSe Ap	c Pass Through	1 Address: 192.16	i8.1.	

## 5. Click **Apply** to save the settings

The DMZ should now be configured and all ports that are not specified In the virtual server table will be forwarded to the specified IP address.