How to Forward a Port with the C100BRS4

Note!

When you want to forward a certain port to be redirected (forwarded) to a certain computer in the LAN network you first have to configure that computer with fixed TCP/IP settings so you will have one IP to forward the port to that will not change.

Example:

P	: 192.168.1.200
Subnet mask	: 255.255.255.0
Gateway	: 192.168.1.254
DNS	: 192.168.1.254

1. Login to the router by typing the IP address in your browser

🗿 al	bout:b	lank -	Microsoft	Intern	et E
Eile	Edit	⊻iew	F <u>a</u> vorites	Tools	He
G	Back	• 6) - 💌	2	
Addre	855	http://	192.168.1.2	54	

2. Click **OK** (standard = no username and password)

Connect to 19	2.168.1.254	2 🛛
R		
20 -		- 11 - TA
Liser name:	0	~
Paceword:		
	Remember my pass	word
	ОК	Cancel

3. Go to Virtual Server



4. Fill the details like you see here:

ltem	Туре	Service	Port	Мар То	IP Address	Enable
1	BOTH 💌	80 ~	80	>	192.168.1.123	
2	TCP	21 ~	21	>	192.168.1.123	
3	UDP 💌	6060 ~	6060	>	192.168.1.200	
4	TCP 🔽	~		>	192.168.1.	
5	TCP 💌	~		>	192.168.1.	
6	TCP	~		>	192.168.1.	
7	ТСР 🔽	~		>	192.168.1.	
8	TCP 🔽	~		>	192.168.1.	
9	TCP 💌	~		>	192.168.1.	

Virtual Server

- **Type**: TCP or UDP (if you are not sure choose BOTH)

- Service Port: port that you need to link (if only one port fill it in both places) - IP Address: IP of the Computer were you want to link to

- Enable: you can choose to enable or disable (without removing settings)

5. Click **Apply** to save the settings:

15		~		1
14	TCP 💌	~	>	1
15	TCP 💌	~	>	1
DMZ IPSe	IP Address: 192 c Pass Through	2.168.1. Address: 192.16] 58.1	

The forwarding should now be configured.