


## Change Listening port

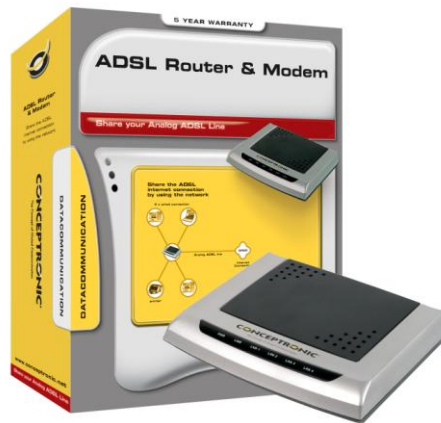

If your WEB server and the router configuration page have the same listen port (80). You need to change the listening router port:

Change the listening router port or disable the **remote administration** option per example to port 81.

To have external access must use the IP and the port, per example: <http://80.32.107.24:81>

To have access from the net you can use: <http://192.168.1.254:81>

In the next image you can see how change this parameter.

**Configuration -> Advanced -> Misc Configuration**

Change **HTTP Server Port** field to 81

Press on **SUBMIT** and to finish y **SAVE CONFIG**

The screenshot shows the web configuration interface for a Conceptronic ADSL CPE. The browser address bar shows 'http://192.168.1.254/doc/index.htm'. The page title is 'CONCEPTRONIC ADSL CPE'. On the left is a navigation menu with options like Status, Quick Start, Configuration, WAN, LAN, System, Firewall, Virtual Server, Advanced, ADSL, DNS, Dynamic DNS, NAT, RIP, Static Route, Misc Configuration, Diagnostic Test, and Save Config. The main content area is titled 'Miscellaneous Configuration' and contains a table of parameters:

| Parameters  |   |
|---|---|
| HTTP Server Access  | <input type="radio"/> All <input checked="" type="radio"/> Restricted |
| <input checked="" type="checkbox"/> LAN                         |   |
| <input checked="" type="checkbox"/> WAN Specify IP              | <input type="text" value="192.168.1.10"/>                             |
| Subnet Mask   | <input type="text" value="255.255.255.0"/>                            |
| HTTP Server Port  | <input type="text" value="81"/>                                       |
| HTTP Password Protection  | Enabled   |
| FTP Server  | Enabled   |
| <input checked="" type="checkbox"/> Disable WAN side FTP access |   |
| TFTP Server   | Disabled  |
| DMZ   | Disabled  |
| DMZ Host IP   | <input type="text" value="0.0.0.0"/>                                  |
| IGMP Proxy  | Disabled  |
| PPP Half Bridge   | Disabled  |
| PPP Reconnect on WAN Access                                     | Disabled  |
| Connect PPP when ADSL link is up                                | Enabled   |
| ADSL Status Refresh Rate (seconds)                              | <input type="text" value="2"/>  |
| UPnP  | Enabled   |

At the bottom right of the configuration area are two buttons: 'SAVE CONFIG' and 'RESTART'.