


How to configure the FTP Server of the CH3WNAS

The storage server is equipped with a built in and user-friendly FTP server, which allows users to access data whether they are on the local network or at a remote location. In addition, the FTP server can be configured to allow up to 10 users to access the specific directories simultaneously on the storage server.

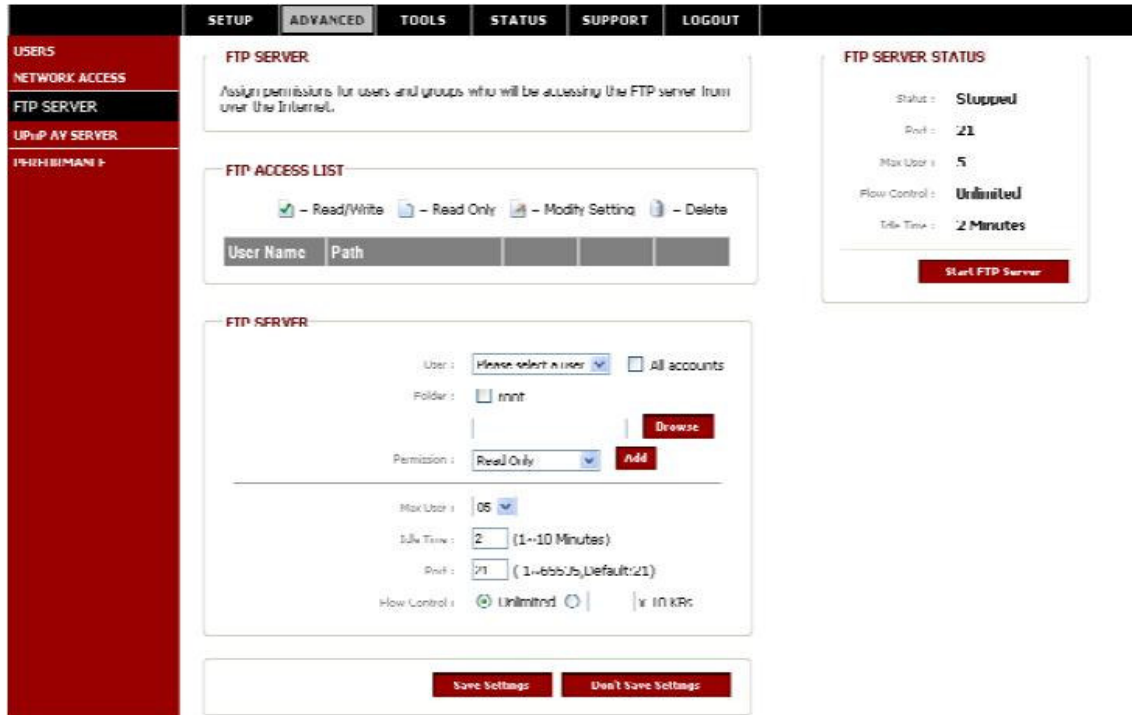

- **FTP Server Settings**

This section contains the settings for the storage server's FTP Server feature. When completed, click "Apply" to save the settings.

- **User** : Select the user the FTP server rule will apply to.
- **Folder** : Click "Browse" to select the folder or directory, or select "root" to grant access to all volumes.
- **Permission** : Set the user permission to "Read Only" or "Read/Write". When completed, click "Add" to add the user FTP rule.
- **Max User** : Set the maximum amount of users that can connect to the FTP Server.
- **Idle Time** : Set the amount of time a user can remain idle before being disconnected.

- **Port** : Set the FTP port. Default is 21.

- **Flow Control Path** : Allow you to limit the amount of bandwidth available for each user.

- **FTP Access List**
Lists all defined FTP Rules.

- **FTP Server Status**
The current settings and status of the storage server's FTP Server are displayed here.