




























## FRONT LEDS EXPLANATION.

	Green [C003]	Blue [C004]	Red [C005]
Communication with the PC in progress			
Formating/installation in progress			
Sleeping mode running or Box restarts			
Press a Key of the RCU is notified			
Record in Progress			
Box running			
Factory Reset (Long Press with a trombone )			
		Quick Flash	
HDD is not detected, or is ou Corupted, after factory reset			
		Quick Flash	
Disk error (No HDD Disk , or not Detected, or not formatted , or corrupted)			
		Slow Flash	