


CMT2D(W) REMOTE CONTROL

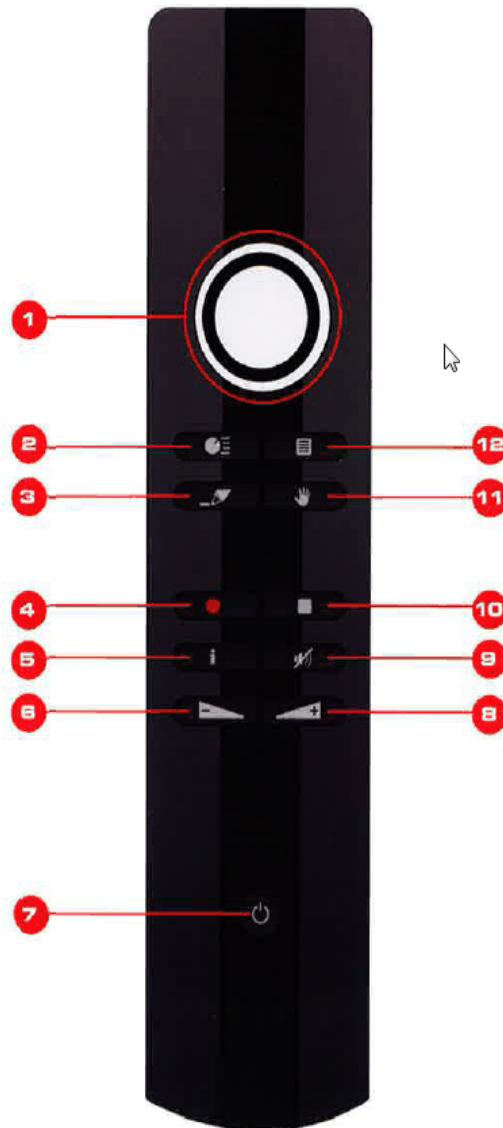

Nr	Button	Description
1.	WHEEL	Navigate through the menus
2.	HOME	Return to the main menu
3.	MARKER	Mark / unmark items
4.	RECORD	Start recording
5.	INFO	Show info
6.	VOLUME -	Decrease the volume
7.	STANDBY	Turn the unit on or to standby mode
8.	VOLUME +	Increase the volume
9.	MUTE	Mute / unmute the sound
10.	STOP	Stop playback / Stop recording
11.	HAND	Display the action menu
12.	NAVIGATOR	Switch between 'Player' mode and 'Navigator' mode

The 'Wheel' is the most important key of the remote control and has multiple usage functions:

- You can rotate the wheel to navigate through the menus or adjust playback settings.
- You can press the wheel to confirm a selection, start playback or pause playback.
- You can press the corners of the wheel (◀, ▶, ▲, ▼) to go left, right, up or down.