


Conceptronic CTVCOMBOI Remote Control layout

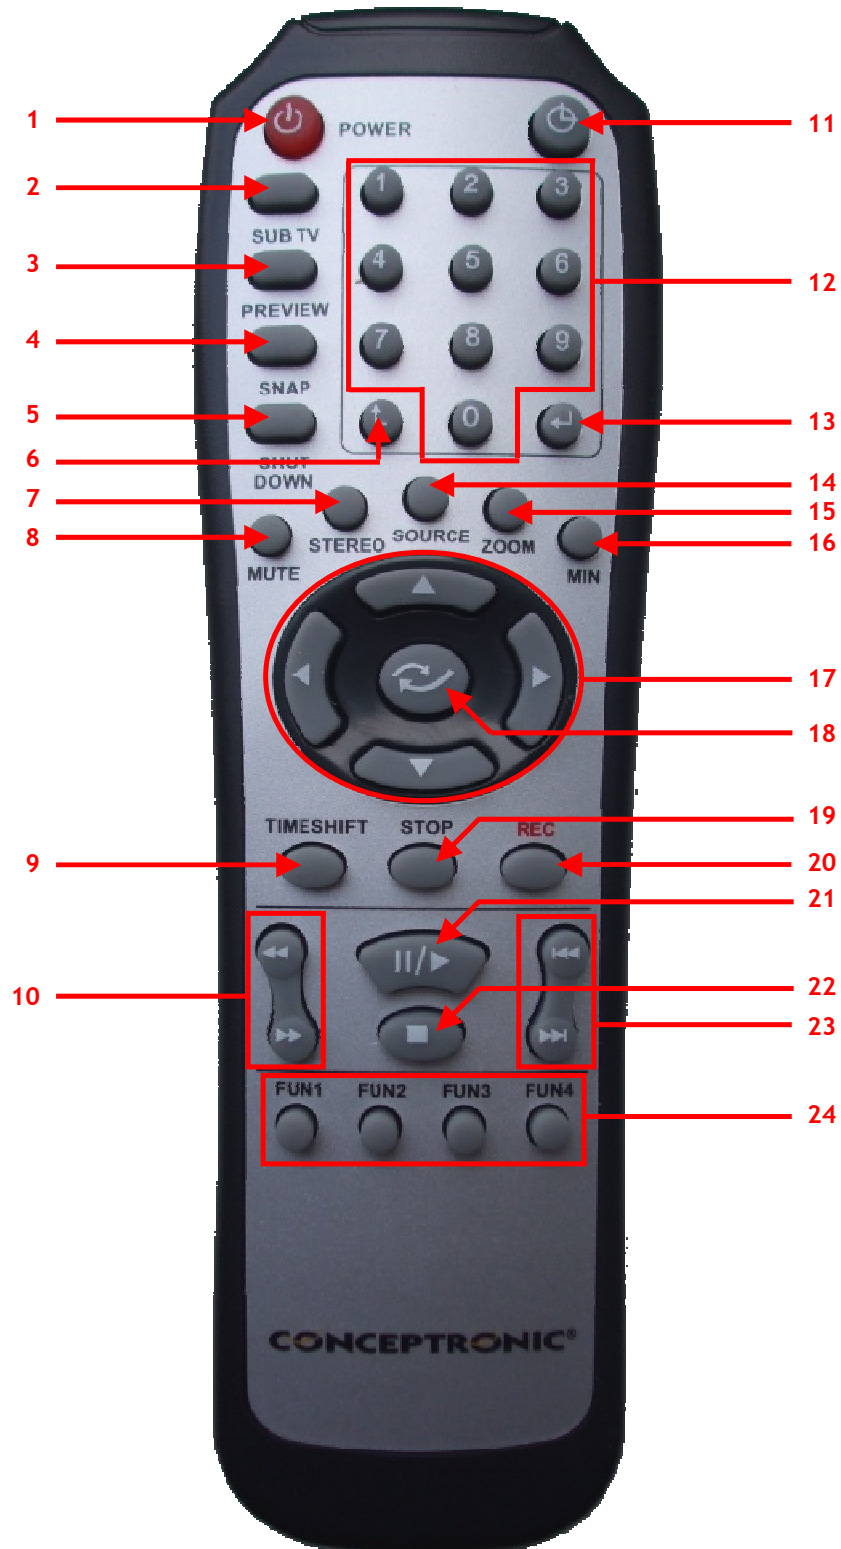

1. **POWER** : Start/stop the software.
2. **SUB TV** : Switch between Analog and Digital TV Focus.
3. **PREVIEW** : Channel preview grid (9 channels).
4. **SNAP** : Take a snapshot of the currently displayed image.
5. **SHUT DOWN** : Shut down the computer.
6. **« PREV CHAN »** : Go to the previously selected channel.
7. **STEREO** : Switch between Mono and Stereo sound.
8. **MUTE** : Mute the sound.
9. **TIMESHIFT** : Start Time Shifting.
10. **FAST FORWARD / REWIND** : Go back or forward within Time Shifting or Playback.
11. **« TIMER »** : Start Sleep Timer.
12. **« NUMERIC BUTTONS »** : Numbers 0-9 for channel or text page selection.
13. **« OSD »** : Shows the current channel through an OSD.
14. **SOURCE** : Switch between Tuner/S-Video/Composite source.
15. **ZOOM** : Switch between Window and Full Screen viewing.
16. **MIN** : Minimize all HyperMedia windows.
17. **« NAVIGATION BUTTONS »** : Left / Right: Volume Down or Up.  
Up / Down: Selection Up or Down.
18. **« ENTER »** : Enter/Confirm button.
19. **STOP** : Stop Recording / Time Shifting.
20. **REC** : Start Recording.
21. **PLAY/PAUSE** : Start or Pause Playback.
22. **STOP** : Stop Playback / Recording / Time Shifting.
23. **NEXT/PREVIOUS** : Playback next or previous item.
24. **FUN 1** : No function.
- FUN 2** : Display current source information.
- FUN 3** : Configure sleep timer.
- FUN 4** : No function.