



CONCEPTRONIC

8-Channel CCTV Surveillance Kit User Manual

C8CHCCTVKIT



V2.0

CONTENTS

Chapter one Products Introduce	4
1.1 Technical Parameter	4
1.2 Product overview	4
1.3 Key Features	4
Chapter Two Hardware	5
2.1 H.264 standalone DVR.....	5
Chapter Three Operation	8
3.1 Operation instruction	8
3.2 Power On.....	9
3.3 Shutdown.....	10
3.4 Multi Channel.....	11
3.5 Preview	11
3.6 Recording operation.....	11
3.7 Playback video	12
3.8 How to control PTZ.....	13
3.9 Alarm control	14
3.10 Display Adjust.....	14
Chapter Four Menu Operation Guide	16
4.1 Recording Setup.....	16
4.2 Camera	17

4.3 Network Setup	19
4.4 System Setup	22
4.5 System Management.....	24
Chapter Five IE Preview.....	26
5.1 logging on interface	26
5.2 System Settings.....	27
5.3 Status control.....	28
Chapter Six QMEYE phone software for use	30
6.1 Instructions of Android.....	30
6.2 Instructions of iPhone.....	42
Chapter Seven FAQ (Frequently Asked Questions)	53

Power

This DVR adaptor is DC12V; please make sure the power supply voltage before turn on the machine.

If long time do not use the machine, please turn off the power of DVR machine, and let the electric plug away from power socket;

2. safety

This DVR only for indoor use, as for prevent short circuit or electric danger, please do not let the DVR in the raining or humid area.

In case any solid or liquid inside the case of DVR, please turn off the power immediately, and ask the qualified technician check it before reboot the DVR;

The DVR is the precision machine, there is nothing for repair by customers themselves in it, when it break down, please ask the qualified technician to check and repair, or contact with the agents of it.

3. Installation

Please keep the DVR in level for installation;

Pay attention to equipment ground;

For the first time to install the DVR, please make sure if the hard disk drive install or not;

Prevent to open the case and change the hard disk drive in electrified;

Propose to select the performance of hard disk drive will be 7200 rotating speed person second;

Please select the appropriate installation site, so let the air can be free flow inside the DVR, prevent the machine overheating;

Please do not install the DVR nearby the radiator, air chute etc. heat source,

or where the direct sunlight, too much dust, or mechanical vibration or attack;

Chapter one Products Introduce

1.1 Technical Parameter

Compression standard	H.264 baseline profile@L3.1
Video input	Composite 1.0Vp-p/75Ω, BNC×8
Video output	Composite 1.0Vp-p/75Ω,BNC×1, VGA×1
Resolution	Preview D1 704×576 (PAL), 720×480 (NTSC) Recording D1 704×576 (PAL), 720×480 (NTSC) CIF 352×288 (PAL), 320×240 (NTSC)
Frame rate	Preview/ recording 8ch 200fps(PAL), 240fps(NTSC)
Audio input	-8dB~22k,RCAx4(8ch)
Audio output	-8dB~92dB,RCAx1
Audio decode	ADPCM
Alarm input	4ch input
Alarm output	1ch output
Recording mode	Manual recording, timing recording , motion detection recording and external alarm recording
Simplex/duplex/ triplex	triplex(recording, playback , LAN transmission)
LAN	RJ45(10M/100M self-adapting)
PTZ control	Yes
Communication	RS485×1, USB2.0×2
USB	USB mouse control
Hard disk drive	1
Remote control unit	Yes
Dimension	Main board size : 220mm x 112mm
Power supply	AC110-230V

1.2 Product overview

The Conceptronic CCTV Surveillance Kit offers an ideal way to securely monitor a house or business. With four cameras focused on different areas, all access points to the front, rear and sides of the property will be covered. All eight channels can easily be monitored from any PC, laptop, tablet or smartphone using the free software provided. Cameras all conform to Weatherproof standard IP65, and operate in temperatures from -10°C to 50°C. Built-in infrared LEDs support night monitoring for distances up to 15 metres, providing peace-of-mind twenty-four hours a day. The quality cameras also offer full-screen, high resolution recording and playback, and recording your data is made easy and efficient with a high compression rate and up to 2 TB of disk capacity. Everything you need for safe, secure surveillance of your home or business.

1.3 Key Features

- 4 x 1/4" CMOS 600TVL Day/Night Outdoor Cameras with an 8-CH Digital Video Recorder included
- One 2.5"/3.5" disk slot supports storage capacity of up to 2TB
- Built-in infrared LEDs for night viewing up to 15m
- Weatherproof IP65-rated
- Wide operating temperature range (-10°C to 50°C)
- D1 real time, full screen, high resolution recording
- H.264 compression for efficient data transfer and storage
- Built-in USB port for backup, firmware upgrade and mouse
- Supports VGA, HDMI output
- Supports iPhone/Android/Blackberry remote viewing over the Internet

Chapter Two Hardware

2.1 H.264 standalone DVR

2.1.1 Hard disk Installation

For the first use, please install the hard disk



① Remove the screws on both



② extracted from the next cover up



③ connect the data wire



④ connect the power wire



⑤ fix the screw of the hard disk



⑥ fix the screw of the hard disk



⑦ close cover



⑧ fix the cover

2.1.2 Rear panel and Front panel of DVR



Front panel




Rear panel

Item	Interface	Description
1	VIDEO IN	8ch video input
2	AUDIO IN	8ch audio input
3	V-OUT	1ch video output
4	A-OUT	1ch audio output
5	VGA	VGA monitor
6	HD-OUT	HDMI interface
7	NETWORK	RJ45
8	USB	First USB for backup or upgrade system of DVR; Second USB for mouse
9	ON/OFF	Power supply switcher
10	DC-12V	Power adaptor port
11		ALARM IN: IN1-IN4 alarm input port RS-485: A, B ALARM OUT: N1 alarm output port, every channel connect GND、OUT、COM; every two channel OUT, COM port is for GND;


2.1.3 Alarm input port

- 4channel alarm input, the mode of alarm input is no restriction (possible is normal open also normal close);
- the GND alarm detector connect to COM under parallel connection (the power of alarm detector supply by external power supply);
- the ground terminal of alarm detector join-up in parallel with DVR;
- the NC of alarm detector connect with the input end (alarm) of DVR;
- when you want to reset the remote alarm of triggered , the +12V power supply of alarm detector supply by DVR, for example, smoke detector.
- When you select the external power supply, please share the GND with DVR;

Alarm input circuit:

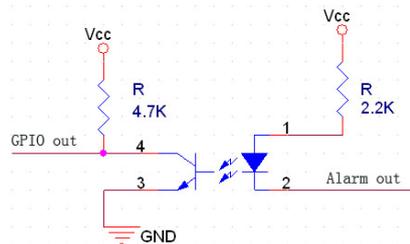


Alarm inlet connection:

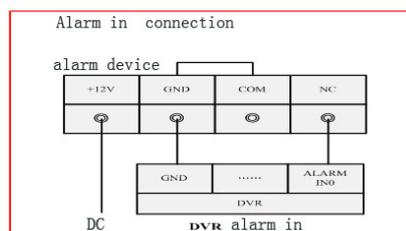

2.1.4 Alarm output port

4 way switching value alarm output, selectable in normally open contact, also selectable in normally closed contact, the external alarm device should be need Vcc;

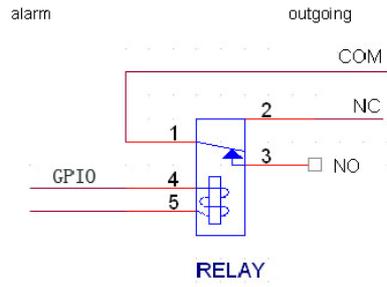

Chapter Three Operation

3.1 Operation instruction

3.1.1 Remote control AND Front panel keypad



Table:

S/N	KEYpad Name	Operating instruction	S/N	Keypad Name	Operating instruction
1	【POWER】	Power ON/OFF	8	【 ENTER 】 【OK】	This button is used as "enter" and "ok" key in most circumstances
2	【MENU】	Access main menu	9	【PTZ】	Access/exit from PTZ control under preview state
3	【ESC】	Exit operation or enter upper menu Close soft keyboard Close current window Exit from current control Return to last menu Exit from PTZ control under preview state	10	【 +/- 】	Volume or number increase/reduction Select item of the list
4	【 <<< 】	Slow playback, 1/2x, 1/4x, 1/8x and single frame play	11	【 ZOOM IN/OUT 】	Lens control
5	【 >>> 】	Fast playback, 2x, 4x and 8x playback	12	【 0-9 10+ 】	Digital input Corresponding; Channel is magnified in full screen under preview state
			13	【FN】	Short cut
6	【 ■ 】	Playback stop	14	【 田 】	Switching of 1/4/8/9/16/24/32Preview mode
	【 ▶/ 】	Play / Pause	15	【ALARM】	Alarm reset
	【 ▲▼◀▶ 】	Four-way to move the focal point in main menu, up and down to move in the normal window, to control pan driver			

		to move in the PTZ control windows			
	【REC】	To mode of recording	16	【CLEAR】	Clear alarm
7	【SEARCH】	Search for playback time choosing			

3.1.2 How to use mouse of DVR (for right hand mouse)

1	Left key single click	To any function menu icon click the mouse left key into the menu
		To run the control point out operation
		Change again select frame or motion detection piece mode
		Click the assemble frame popping to pull down the list
<p>In the input frame, can select digit, character, lowercase, block letter, left click mouse on the keyboard of character input, that's. ← say move back, _ say blank, Shift say switch case .</p> 		
2	Right click mouse	Right click mouse, popping the shortcut menu, as follows:
		 <p>Through the menu can be switching preview screen window mode, start replays, PTZ control. Four pictures playback mode, the point of the right mouse button, Can in a single picture, four pictures, eight pictures (8 road playback), 16 screen (16 road playback), twenty four picture,thirty two picture, broadcast control switch view show or hide broadcast control bar.</p>
3	Double click left button	To run the ActiveX Control ActiveX special operation, For example, double click the certain item of record listed file, then the system will playback the segment record video.
4	Dragging the mouse	Depress the left key and dragging the mouse, banding select Motion detection area, depress right key of mouse and Dragging, cancel the banding select area.
		Dragging playback ProgressBar back and forth to dolly moves, to achieve the playback position adjustment. Dragging the audio and video regulation parameter bar dolly moves, to achieve the parameter adjustment.

3.2 Power On

Boot-strap

If 【POWER】 pilot lamp off, please follow the operation step by step:

First step: if the power does not plug into, please plug into the power, then the DVR begin to start, by now, if the DVR still inactive, to enter the next step;

Second step: turn on the power supply of the DVR at the back panel, DVR begins to start.

If 【POWER】 pilot lamp to offer RED, press the 【POWER】 key, DVR begins to start.

The video output mode of DVR 's the default setting is multi picture channel mode after starting the DVR , if the time of start the DVR is in the Timing Recording Setting, the DVR will automatically to start the Timing Recording function, the corresponding channel's recording pilot lamp will be light, the DVR is normal operation.

Button	Description	Button	Description
	Main Menu		PTZ control
	Wizard language		Alarm control
	Multi channel		Display setup
	Recording Control		Exit
	Playback Back up		

If before starting, the system not to install hard disk, into the system, will tip: system didn't detect any hard disk connection!

Note:

In this dialog you can select language and quickly set various of parameters.



3.3 Shutdown

◆ **There are two safety mode for Shutdown**

Enter **【Exit】** ,select **【Power Down】** .



◆ **Abnormal shutdown**

Through the rear panel to shutdown

During the DVR running, directly to turn off the power through the rear panel power switch, please avoid as much as possible to do it. (specially while the DVR

recording).

Directly to pull up the power cable of DVR

While the DVR running, directly to pull up the power cable of DVR, please avoid as much as possible to do it. (specially while the DVR recording).

Caution: In some area, the power supply is irregularity, it will cause the DVR working not normal-operation, the DVR will be damaged in serious. In this surroundings, suggest select the stabilized voltage supply.

3.4 Multi Channel



1/4/8/9preview screen mode switch

3.5 Preview

After log in system of DVR, system will automatically directly enter the preview mode

In the preview picture, you can see the overprint date, time, channel name, if the date and time is not correct show on the picture, re setting the date. There is a alarm input mode icon. (the meaning of every kind of icon as following table)

Channel picture attention

3.6 operation

Customer can the different kind of this system. For the recording mode you will be showed the channel.

1		Channel is video when channel video pictures showed this symbol	2		Channel happen when dynamic test, channel video pictures showed this symbol
3		Channel open sound, the channel video pictures showed this symbol			

Recording

according to select recording mode in different kind of set, the channel mark on everyone

Manual recording

Note: Manual recording operational requirement the user should have “recording” permission. Please make sure the hard disk drive has been installed and it has been formatted.

1) Input manual recording operation menu

Single click right key of mouse or In main menu=> recording control can into manual recording operation menu. Under preview mode, press REC key or on the Remote controller unit key into recording control operation menu, as follows:




2) The explanation of manual recording operation menu

【manual recording】 Priority level highest, no matter currently what status of every channel, after carry out the manual press, corresponding channel will be record common in progress;

【Auto recording】 Setting channel recording by setting condition to record under Timing, Motion detection and Alarm in Recording Setting;

【Stop Recording】 All video channel stop recording;



3.7 Playback video

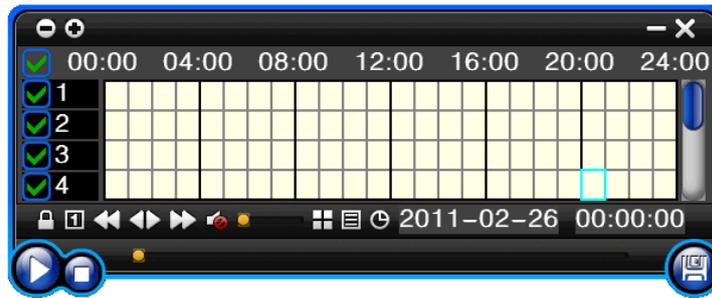


Button	Description	Button	Description
	Synchronous/asynchronous play		Voice adjustment
	frame by frame		1/4/8/9screen(switch image)
	Speed slow		Hide / display list
	Speed normal		recording date
	Speed fast		Play/pause/stop
	Sound off/on		rewind

Note:

- 1) During playback the Playback Tool will show the file playback speed, channel, timing, playback speed etc. information in the Playback control panel;
- 2) Can't same time to select the Fast forward operation function in over 2 channel, only progress in anyone channel;
- 3) Can drag the Playback Speed toolbar by mouse;
- 4) In this dialog you can select the video precise to the second.

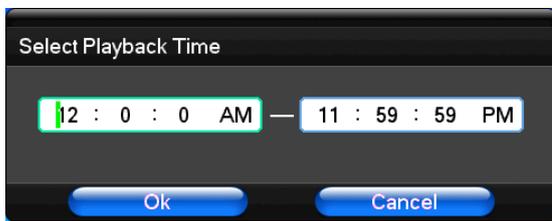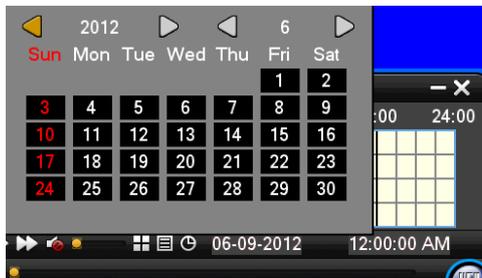

3.8 How to control PTZ

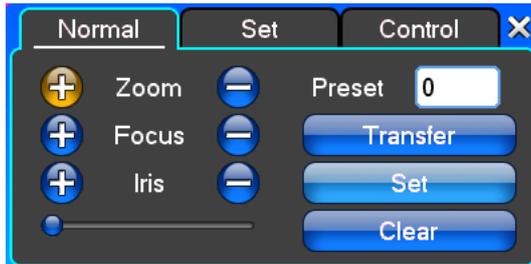

【Zoom】 Lens in the current play far closer picture, use the mouse wheel also can undertake variable times control.


【Focus】 Slight adjusting the focal length

【Iris】 Aperture size adjustment

【Speed】 Through the slider adjust rotation stepinterval, yuntai mainly used to control direction operation, the step length of turning the faster yuntai.

【Preset】 Adjust the camera Angle, then direction and the corresponding input and clicking on [set] button, preset dots to set the dots in the preset rastelli.

Input presets dots and click on [Transfer] button, the camera will be transferred to the preset point corresponding position.Click[remove] button, this presets dianjiang be cleared

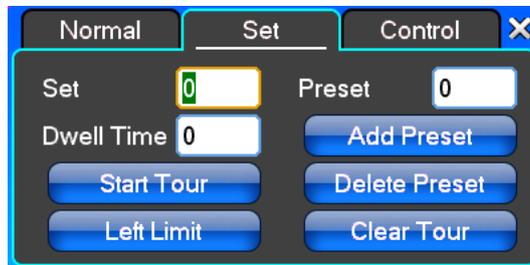

【Set】 Click 【Start Tour】 the trajectory of said no corresponding, click the 【 add Preset 】 and 【 delete Preset point 】 , 【Clear Tour】 the cruise lines.

【Start Tour】 begin to track record, was registered date 【 end Tour】, thus set up from the corresponding track circuit.


【Left Limit】 Began to limit scanning Settings, was registered date 【 right Limit 】 , thus set up corresponding limit scanning.

【Add Preset】 Add presets point to the cruise lines.

【Delete Preset】 Cruise lines from deleting preset points.

【Clear Tour】 Remove the cruise line designated.

Note: some equipment doesn't fully support all function, depending on the specific yuntai equipment and different.

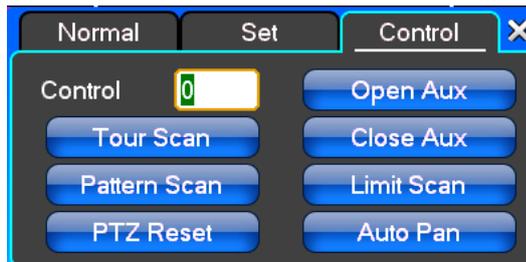

【Control】 PTZ Control

【Tour Scan】 Point between cruise control.

【Pattern Scan】 Track patrol control.

【PTZ Reset】 Remove all Settings, original reset to the original state.

【Limit Scan】 Yuntai boundary scan control around.

【Auto Pan】 Remove the cruise line designated

Note: some equipment doesn't fully support all function, depending on the specific yuntai equipment and different.

3.9 Alarm control



【Set Alarm】 Selection need protection channel, click confirm corresponding channel after in protection status


【Clear Alarm】 Remove protection condition, not alarm input to react

【Alarm Output】 Open the alarm output.In the premise of no trigger alarm input,user can operate the output.for example, some alarm switch is connected with a lamp,lamp is open when alarm is trigered

【All】 Can choose all the channels

3.10 Display Adjust

(1)Video

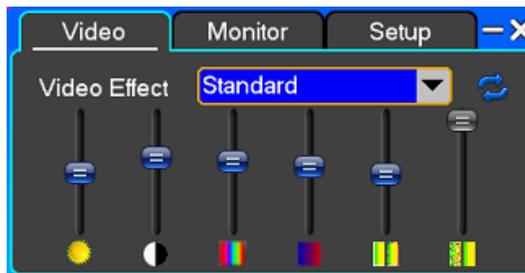


【Video Effect】 Optional: standard, downy, sharp, custom.

【Default】 Restoring default effect, for custom video effects, copy standard effect parameters.

Through the slider fluctuation sliding, respectively adjustable brightness, contrast and saturation, tonal, etc.

(2)Monitor

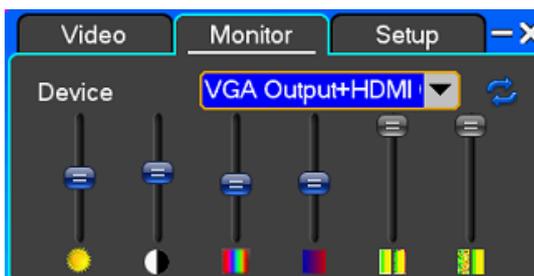


【Device】 Optional: VGA output, TV output etc display output device.

【Default】 Restoring default display parameters.

Through the slider fluctuation sliding, respectively adjustable brightness, contrast and saturation, tonal, etc.

(3)Setup

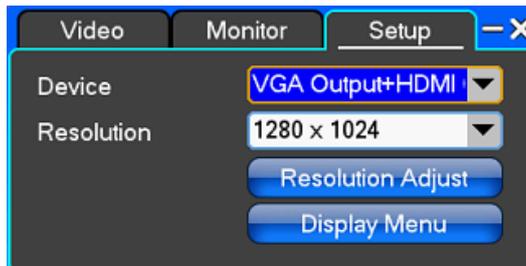

【Device】 The first generation of DVR's optional: VGA output, TV output etc display output devices, the system may support multiple equipment and output.

The second generation of DVR's optional:VGA Output+HDMI Output、TV Output.

【Resolution】 Setting the resolution of the display device.

The first generation of DVR default VGA resolution is 1024 x 768;

The second generation of DVR default VGA resolution is 1280 x 1024;

Chapter Four Menu Operation Guide

4.1 Recording Setup

(1) Recording Setup



【Channel】 Choose the need to install passage "whole" says setting all channels.

【Image Size】 CIF/HALF D1/D1,if the model is 960H,the encoding format maybe is 960H/D1/CIF,if the model is 1080P,the encoding format maybe is 1080P/720P, different models,different encoding format

【Encoding Mode】 Including fixed bitrate, dynamic bitrate.

【Image Quality】 Client-side image quality, the higher the quality the clearer. Choice scope: minimum, low, general, high, highest

【Frame Rate】Can click on the button manually input, 1 ~ 25 frames per second (PAL) or 1 ~ 30 frames per second (NTSC) continuous adjustable.【Audio】Can select close, open according to requirements

【Pre-Alarm Rec】 Can select close, open according to requirements

(2)Sub-Stream



【Channel】 Choose the need to install passage "ALL" says setting all channels.

【Encoding type】 CIF

【Frame Rate】 Including auto/1/2/3/4.

【Image Quality】 Including lowest/low/Common/Hihg/Highest

(3)Channel Overlay



【Channel】 Choose the need to install passage "whole" says setting all channels.

【Channel Name】 Can manual corresponding input channel's name

【Channel Display】 Can choose according to the requirements of users don't use, the top-left corner, left, lower, middle and downward, upper, right, and lower.

【Time Display】 Can choose according to the requirements of users don't use, the top-left corner, left, lower, middle and downward, upper, right, and lower.

(4)Recording Schedule



【Channel】 Choose the need to install passage "whole" says setting all channels.

Each longitudinal row of every seven days a week, said the 24 hours a day manipulated said, mouse the left key click on the small square footage, setting time to clean it has chosen right-click drag video time.

4.2 Camera

When the system starts the camera will detect the format of video

(1) PTZ Setup



【Channel】 Choose regional channels, yuntai Settings "whole" says setting all channels

【PTZ Protocol】 Yuntai equipment communication protocol

It contains these options: Pelco_D、 Pelco_P、 LILIN、 MINKING、 STAR、 VIDO、 NEON、 DSCP、 HY、 N-control、 RM110、 SAMSUNG, the default option is Pelco_D.

★Note: yuntai parameter Settings every channel need after completion in Settings of gc1318 alone.

【PTZ Address】 Yuntai equipment address, digital range 0 to 255.

★Note: here with the address must be consistent ball machine address, we can't control the ball machine.

【Bit-rate】 Yuntai equipment baud rate.

(2)Video Setup



【Video Mode】 Provide PAL and NTSC both formats video formats choice, modify after you must restart your system can take effect.

【Channel】 Choose to set the video Settings area passage "whole" says setting all channels

【Reserved Section】 Click Settings enter. The white areas for privacy area

【Buzzer Alarm】 Happen when video lost choice whether or not to allow buzzer warning

【Alarm Output】 Happen when video lost upcoming linkage selected channel corresponding alarm output

(3) Motion Detection



【Channel】 Choose need to set up mobile testing area passage "whole" says setting all channels

【Sensitivity Setting】 Can be set to give: minimum, low, general, high, highest


【Detection Area】 Click Settings enter.

Green area for dynamic test, grey areas design.ferroconcrete-brick undefended area for. Press the mouse left key to drag on the lower detection area to the right, press the mouse button clearance. Detection area drag The save and exit button can save Settings, some give up and quit button abandon modification.

【Buzzer Alarm】 Occur when dynamic test on the buzzer whether to allow the alarm

【Trigger Recording】 That will happen when dynamic test on the linkage of selected channel fast ball trigger video

【Alarm Output】 In this passage setting user can be copied to the other channels, fulfill the same dynamic detection alarm Settings

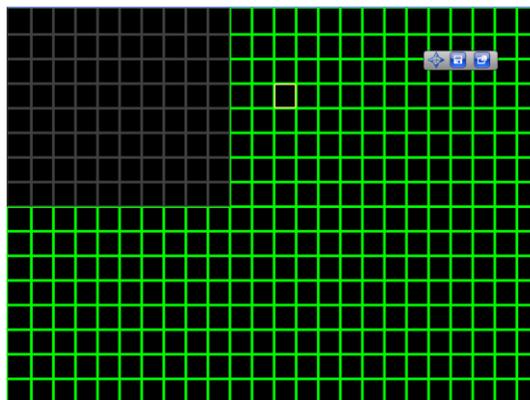

(4) SEQ Display




【Time】 Interval time from 5s to 255s

【Full page】 select channel to switch

【Quad page】 Quad mode.

4.3 Network Setup

(1)General Setup

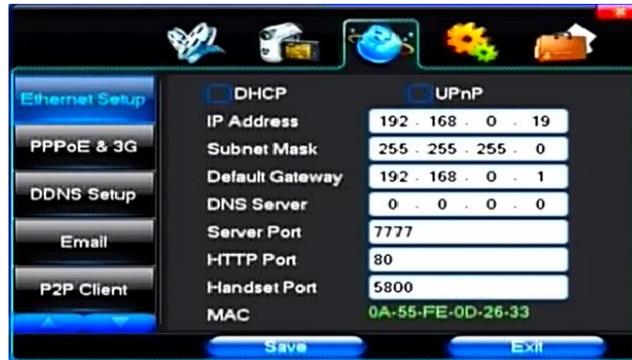

【DHCP】 After checked automatic assignment device will get IP address, subnet mask, the default gateway, the DNS server, etc

【UPnP】 Can choose according to the requirement

【IP Address】 Network logic address can according to the requirements set

【Subnet Mask】 Server subnet mask

【Default Gateway】 Server gateway

【DNS Server】 DNS server addresses

【Server Port】 Data port, initial socket for 7777

【HTTP Port】 the default port for 80. If change, when using IE browser, need to monitor the IP address, adding new socket. If use IP address to 82, from the original browsing http://192.168.0.19, change for http://192.168.0.19:82.

【Handset Port】 Network phones socket, initial socket for eight thousand eight hundred and eighty eight

(2)Dial-UP Setup



Tip: PPPoE dial-up successful, according to 【 PPPoE IP 】 shown on IP address, users can remote access hard disk video recorder. By nic LAN IP access. The dvr support model:

Unicom: huawei E173,zhongxing MF100

Telecom:huawei EC150.huawei EC156.zhongxing MF583

“3G DIAL” have two modes with automatic and manual dialing, the operation follows as below.

1. Automatic Dialing

Select the Automatic Dialing in the interface of the following picture, fill the right information according to the operator where the 3G card belongs to and the 3G referred guide, It includes IPS names, AP, dial-telephone, ID and password, the interface shows as the other following picture (some IPS once be chosen, the other relative information has been already done, so you needn't fill any more, click “SAVE” directly). Then click “Save” directly. After having detected the 3G signal when DVR start, the system will dial up automatically.

2. Manual Dialing


In the interface of following picture, users would fill the right information in the menu bar as same as

Automatic dialing and click "SAVE". Then click "Dial-up" after saving successfully (The referred information would be saved still after the DVR restart, but you should click "Dial-up" again).

In these two modes, if the dial-up want success, first you should make sure that the 3G card is available. Since the 3G signal has been existed, the related menu bar will show the correct IP address; if failed, system will popup a window to show the wrong information.



(3)DDNS Setup

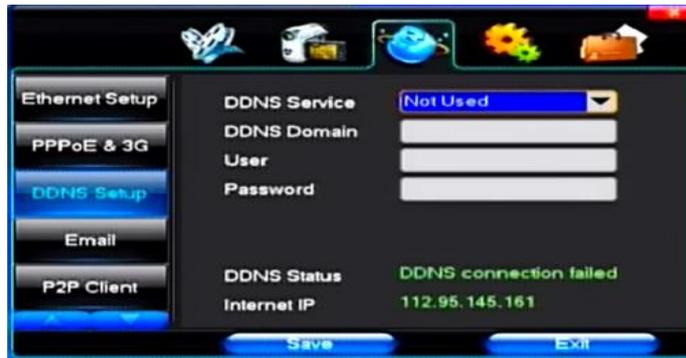

【DDNS Service】 Dynamic DNS provider website, Via DDNS server, it compatible with, DYNDNS.ORG



【DDNS Domain】 Dynamic domain name, soft keyboard and hard keyboard can be input.

【DDNS Account】 Login domain name service provider website user name

【DDNS Password】 Login domain name service provider website password

Tip: through the dynamic DNS server. Support dynamic DNS.

(4)Email



【SSL Protocol】 Sending E-mail in use safety network connection

【Test Email】 Send an email to the recipient mailbox test

【Email Address】 The recipient's email address. Users can input two different email address.

【Send Email】 The sender email address .

【SMTP Server】 Send mailbox mail server

【Email Account】 The sender email address the corresponding account

【Email Password】 The sender email address of the corresponding email password

According to the customer request can be checked 【Video Setup 】 and 【 Motion Detection 】 sending emails. Two can also choose.

Note: your sender email must support SMTP.

(5)P2P Client



【Cloud ID】 it is the P2P ID number

【IEweb】 p2p website : www.qmeye.net, support to download software and directly visit DVR via IE browser

【QR-code】 Cloud ID/ IPHONE ,ANDROID SOFTWARE link

(6)Access Control




【List Rule】 According to the requirement to choose: don't use, allow access, refused to visit.

- 【Starting IP】 Display IP address started section
- 【Ending IP】 Display IP address end segments
- 【Add】 On the basis of the need for added
- 【Delete】 According to the need to delete

4.4 System Setup

(1)Time

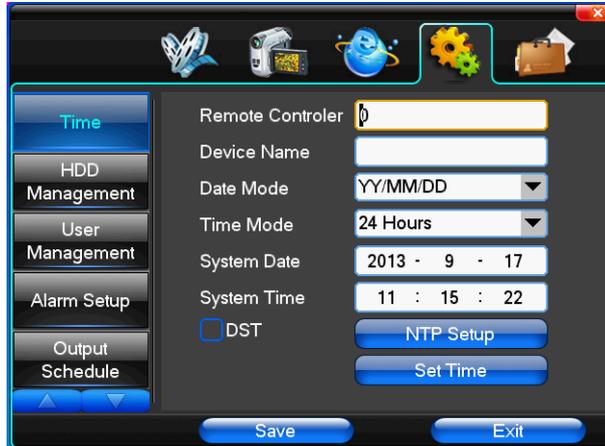

【System Language】 Used in a remote remote device control more hard disk video recorder occasions, only in remote controls address and hard disk video recorder Numbers identical to remote operation.

【Device Number】 According to the requirement to select the time zones, has twenty six time zone for user Settings.

【Time Zone】 Select the format the date is displayed in including date, sun and moon June 21 years in three formats.

【Date Mode】 To choose time display modes include 24-hour system and 12 hours to make


【System Date】 The current system date

【System Time】 The current system time

【Daylight-saving mode】 According to the requirement to choose

【Set Time】 Confirm modification system of time

(2)HDD Management

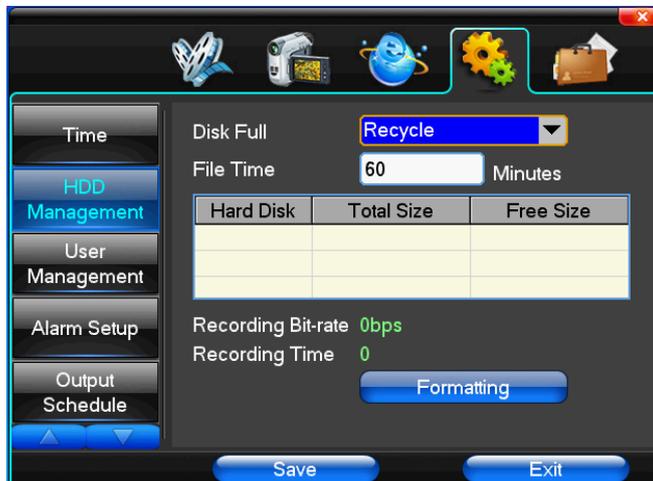

【Disk Full】 When video disk full system how to deal with, "said system will be automatic coverage the earliest video files continue covering video," stop video "says system to stop the current video.

【File Time】 Says automatic generation video files interval, the set range 5-120 minutes.

【Recording Bit-rate】 Said the total rate of current coding

【Recording Time】 Said the storage devices systems installed in accordance with the current bitrate can store video of time.

Display the current hard disk attributes: types, hard disk, usable capacity total capacity. Click [formatting], all storage file will be lost.

Tip: to format the hard disk before please stop system current all those videos.

(3)User Management



【User】 Characters in length up to 8 bytes, ignore trailing Spaces. Can be letters, Numbers, and other symbols. The user has the largest number of eight, user name may not be repeated.

【User Rights】 According to the requirements set of functions need checked

【Add User】 Input need to add user, and input the account password and passwords. According to save button to add user.

【Delete User】 Select the users need to delete, and click on the "yes" button to remove users

【Edit User】 Choose need to modify user, and in user permissions bar needed under the function of check. According to the save button modified users.

【Edit Password】 Select the account, input to modify current user password, and enter the account password and confirmation password new. According to the save button for password changing. The password can be set to 0 ~ 8 bits

(4) Alarm Setup



【Alarm Input】 Choose corresponding alarm channel, "all" setup all channel said.

【Input Type】 Alarm input to often open/closed type choice (voltage output style)

【Clear Alarm】 Stop the current alarm video and alarm output, but not removal, can again trigger alarm.

【PTZ Relate】 When will the linkage happened alarm yuntai control

【Trigger Recording】 When will trigger happened alarm selected channel video.

【Alarm Output】 When will the linkage happened alarm corresponding alarm output

(5) Output Management




【Buzzer Output】 In the chosen time intervals have alarm input will start buzzer output.

【Send Email】 In the chosen time intervals have alarm input which will send relevant information, such as the alarm events, paparazzi pictures, equipment name, device ID, etc sent to user specifies the mailbox.

【Alarm Output】 In the chosen time intervals have alarm input will start alarm output

(6)Margin Adjust

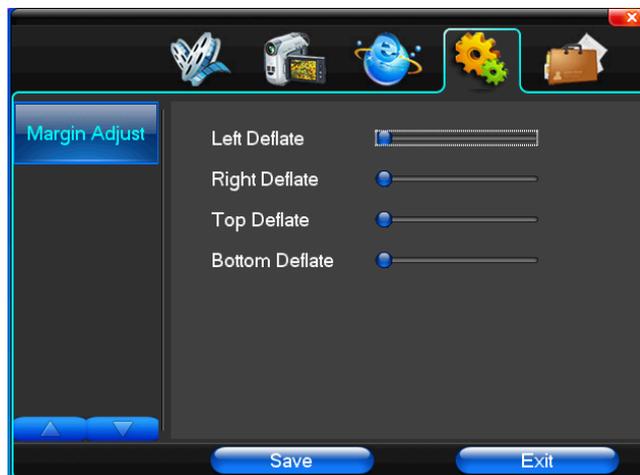

By the function, you can adjust the distance between the display device and the picture edge.

4.5 System Management

(1)System Upgrade




Show the system hardware versions, software version, release dates. Click [software upgrade] , the system began to automatically detect and upgrade file.

Note: equipment currently support upgrades: local USB mode, IE mode, the client software.

USB mode: former ensure USB device to connect upgrade normal, as upgrade program has copy USB devices in the root directory. According to the interface can upgrade operation hints.

Upgrade was successful, and the screen appears to restart operating hints. Equipment reboot after system that will enable the new software.

(2)Log Search

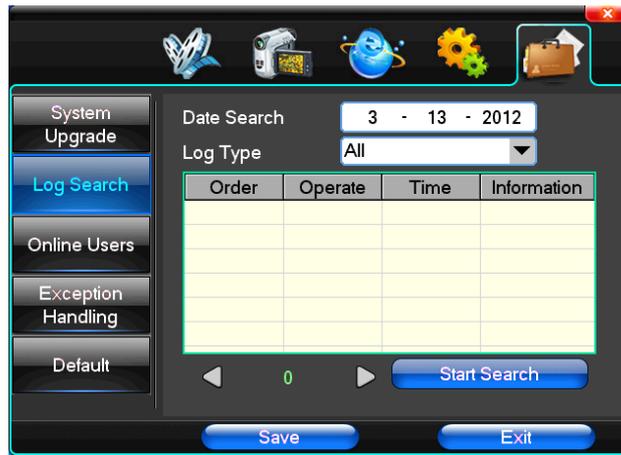

【Date Search】 Can search according to date

【Log Type】 Optional: all, operation log, set diaries, alarm log, error log


Note: according to the left, right arrow can move forward and content.

(3)Online Users



Display the users who are visiting the DVR.

(4)Exception Handling

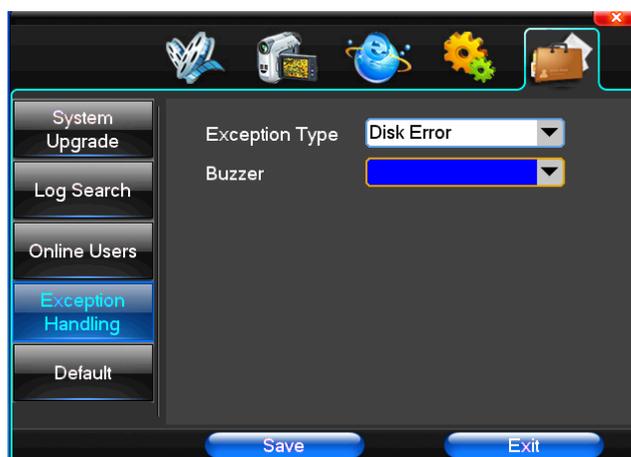

【Exception Type】 Choose abnormalities: hard disk full, hard disk errors, network connection.

【Buzzer】 When abnormality, choose whether to allow the buzzer hints.

(5)Default




Restoring default can restore selected according to need. The system restore to the default configuration state out, can according to the menu options choose to restore the corresponding Settings.

Tip: menu color, language, time date format, video format, IP address, the user account, etc will not be restored.


Chapter Five IE Preview

5.1 logging on interface

To input the IP address

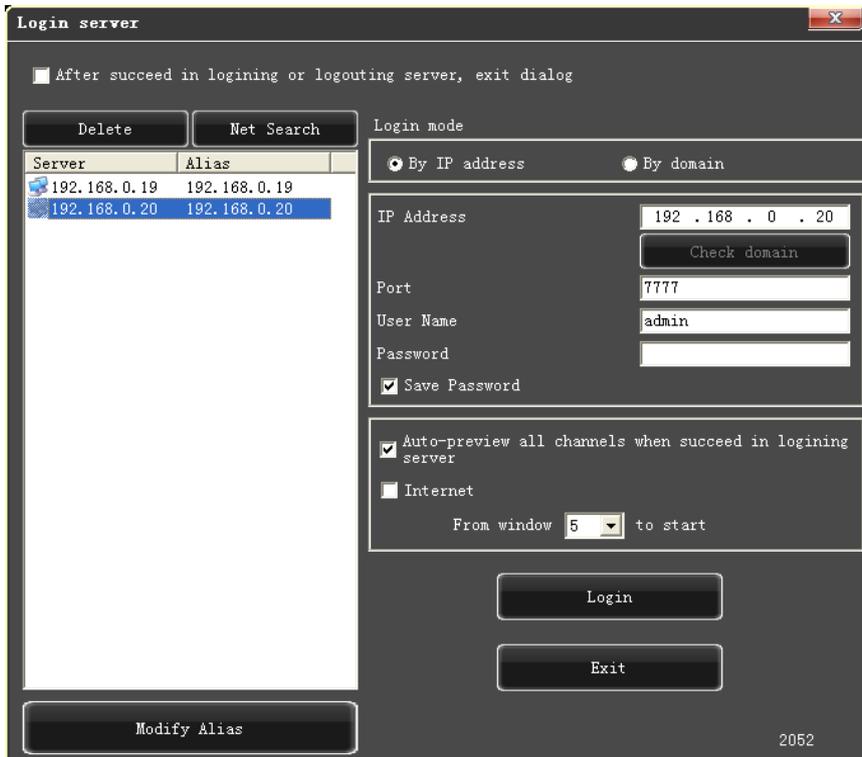




Pretermision IP address is 192.168.0.20

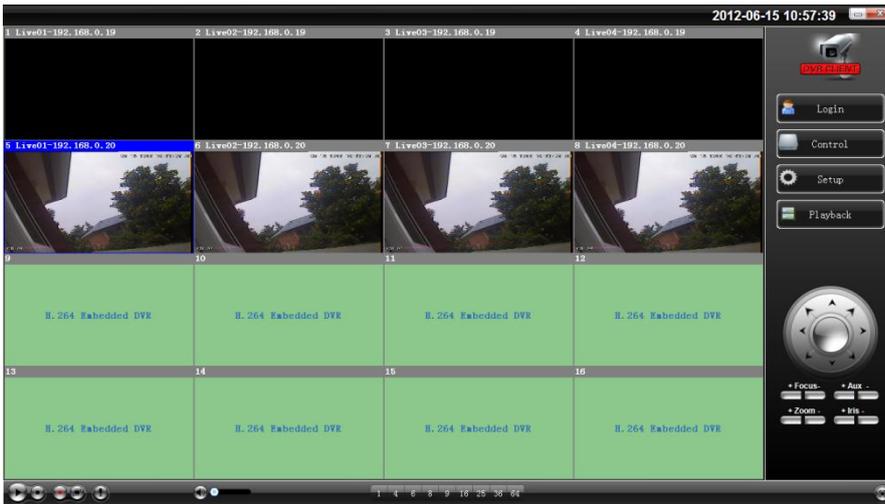

5.2 System Settings

Point [Setup](#), As the picture, You can set up language directory, After all to save you set.

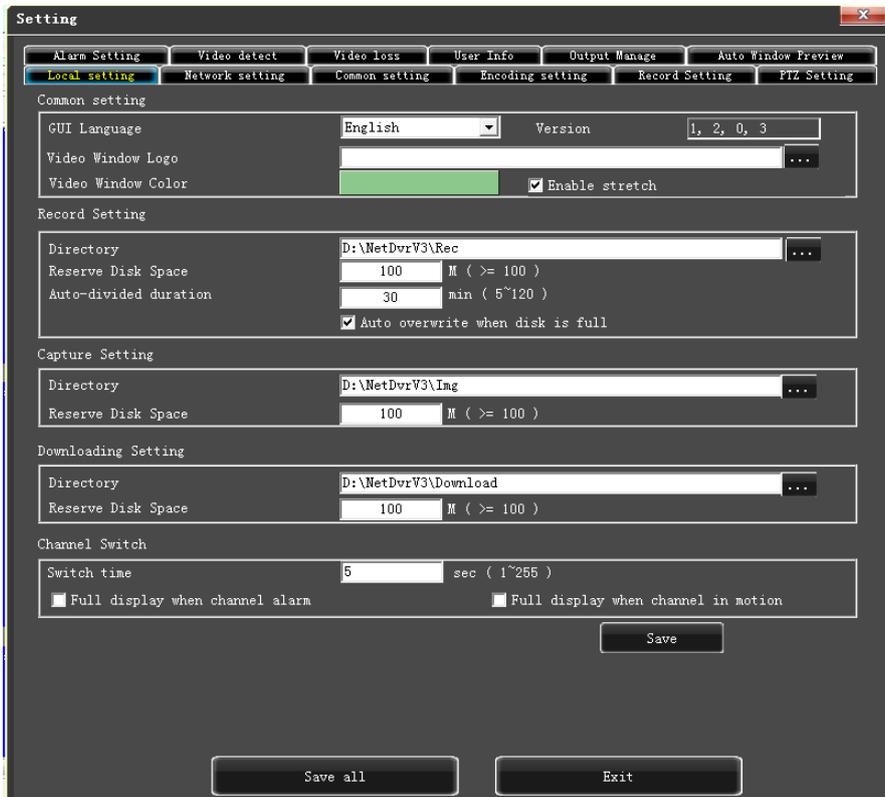

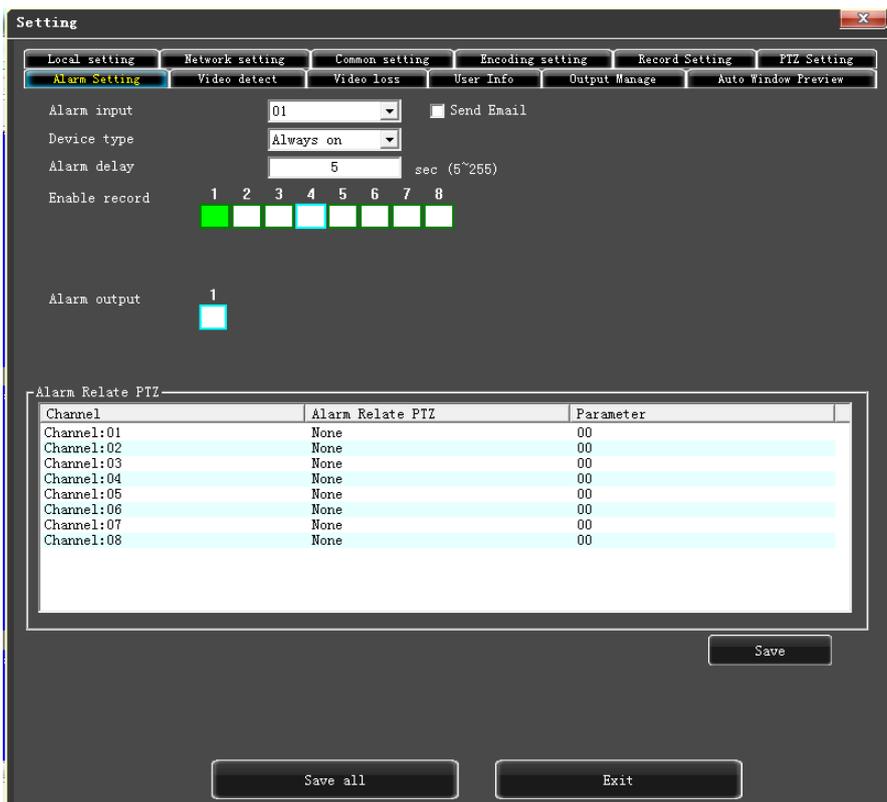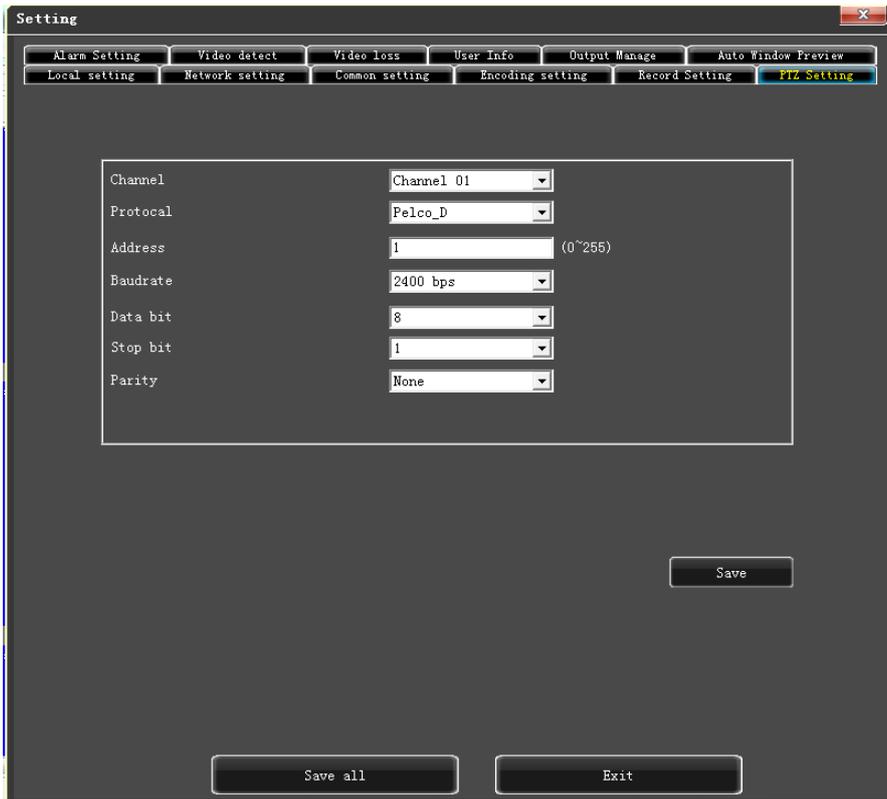



5.3 Status control

In state control you can set reboot server, close server , remote to go up

Remote upgrade: let PC file load in the system

Log: to inquire sometime the server's action

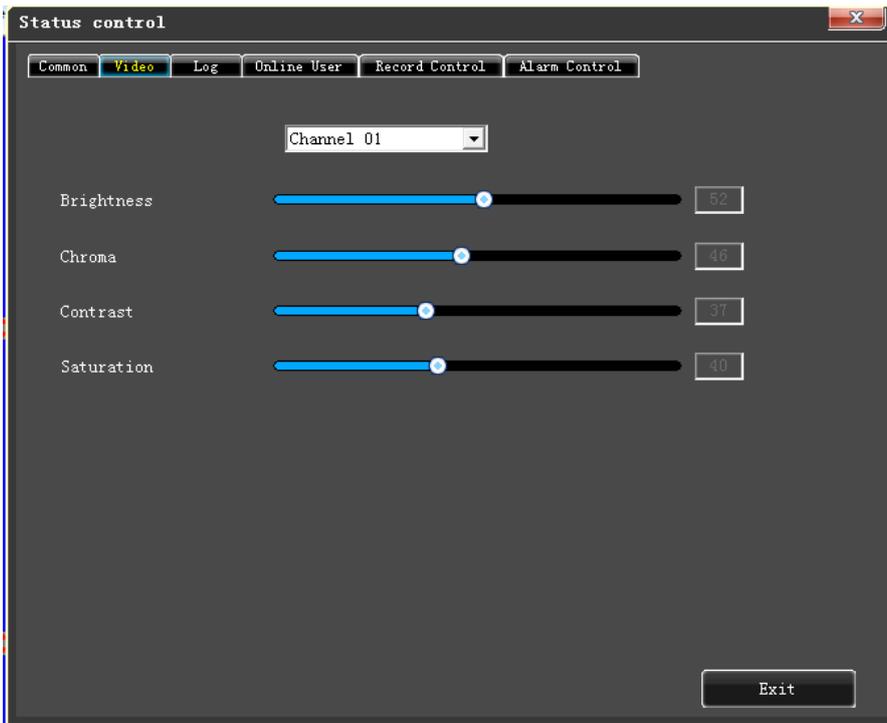

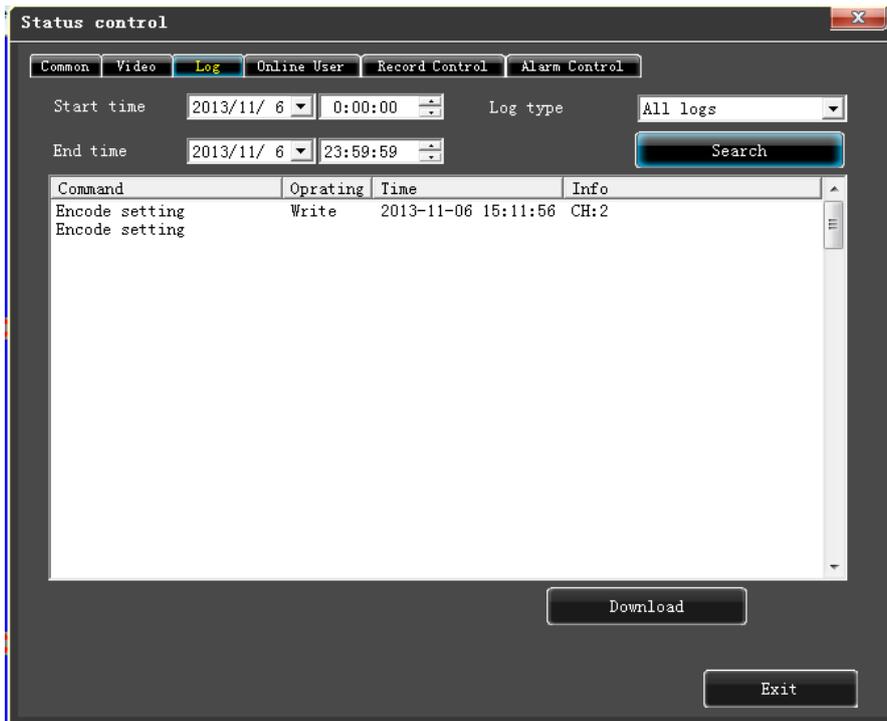

Chapter Six QMEYE phone software for use

This cloud service platform is the best mobile phone video during the internet era. It consists of front-end acquisition devices, platform servers, and remote view of three parts.

1) The acquisition of client software:

The client software can be got from the CD material equipped with CD, then choose English and select the options supporting tools, finally choose the mobile phone monitoring or obtained from technical support. Each type of corresponding client software as follows.

1. **QMEYE.apk**: The smart phone monitoring client of Android operating system
2. **QMEYE.ipa**: The smart phone monitoring client of phone operating system

2) The instructions of three platforms is shown as follows.

1. android
2. iphone

6.1 Instructions of Android

6.1.1 Essential condition

- 1) Support the version 2.2 or above of Android system.
- 2) Support DVR platform versions:

Hisilicon v2.0.0.81 and higher.

6.1.2 Installation and operation instructions

Installation

Support two installation modes and the user can choose one way for installation.

1. Install online

Search QMEYE on himarket or google play and install online.

2. Install offline

Copy the QMEYE.apk installation package to Android phone through cable. In the specified directory find out the corresponding .apk , click the application installation (If there is not installed apk installer in the mobile phone, the user needs to download an apk installation software so that it can identify the apk package), and there

will be program icons after finishing installing.

6.1.3 Login interface

6.1.3.1 Login interface


Open the software into the login interface, inputting the username and password and click button "login", then it will be login the application.



Icon description:

icon	Function description
	After select, it will go directly to the main menu when you log in again.

6.1.3.2 User register

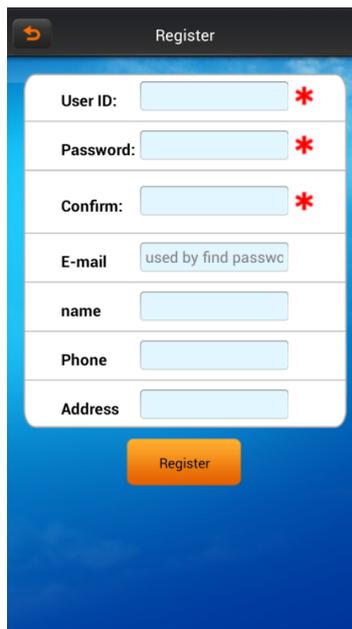


Click the button "register" on the login menu, then will jump to the register interface.

Enter the register information, click "register" then will be registered.

Note: please enter the valid E-mail address in order to retrieve your password when you lost it.

6.1.3.3 Retrieve the password

On the register clicking the button "login" and jump to "retrieve password" interface.

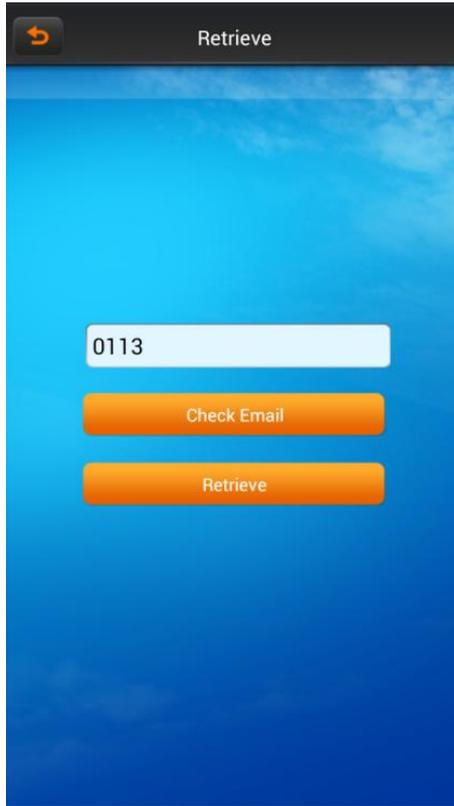


Input the username, click button "retrieve password".

If you have entered your name and email address when registering and the username has been occupied, then "retrieve password" information will be sent to the email address.

6.1.4 Real-time preview


In the main menu, clicking "real-time preview

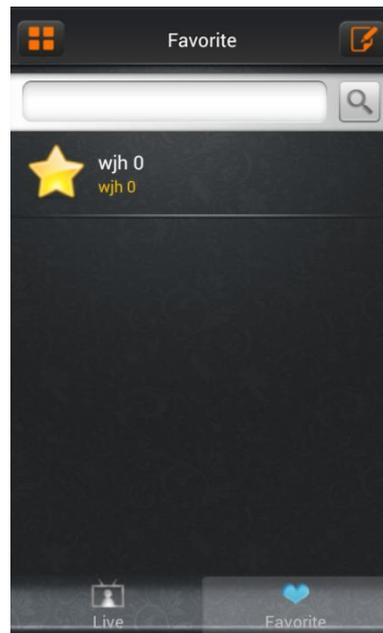

Click "Favorites" button, go to "collection management" interface

Click on the icon , favorites list change into editing state, click icon , you can delete your favorites.

Select one of the devices on "Live list" enters the video preview interface.

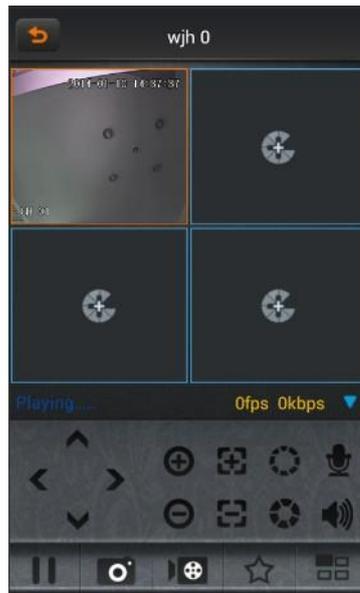

Button instruction:

icons	function instruction
	return to main menu
	move to the left
	move to the right
	move down
	move up
	enlarge
	narrow
	zoom out
	zoom in
	aperture enlarge
	aperture narrow
	start/ close intercom
	start/ close speakers
	stop/ start
	snapshot
	start / close the local video
	favorites
	channel switcher

6.1.5 Device management

Click the button "device management" on the main menu and enter "device management" interface.



Icon instruction:

Icon	Function instruction
	return to the main menu
	click on the pop-up menu, such as modifying parameters, name options
	shot
	catalogue
	device
	after pop-up, add the catalogue,, device and shot menu
	search the local shot

6.1.5.1 Modify the connection parameter

Click on the icon , select "modify connect parameter", then into "modify device" dialog box:



- A) Click on the icon , return to the device management lists.
- B) Click on the icon , save the current configuration.

6.1.5.2 Modify the name

Click on the icon , select the option "modify the name", then pops up "modify name" or "modify the catalogue" dialog box.



- A) Click "OK" button to save the current configuration.
- B) Click "cancel" button to cancel the modifying.

6.1.5.3 Delete

Click on icon , select "delete" button to delete the current device directly

6.1.5.4 Add the catalogue


Click on icon , select "add the catalogue" option, then pops up "add the catalogue" dialog box



- A) Click "OK" button, it will be saved the current configuration. Then will be showed in the device management list.
- B) Click button "Cancel" to cancel to add the catalogue.

6.1.5.5 Add the device

Click on the icon to select "add the device" option. 

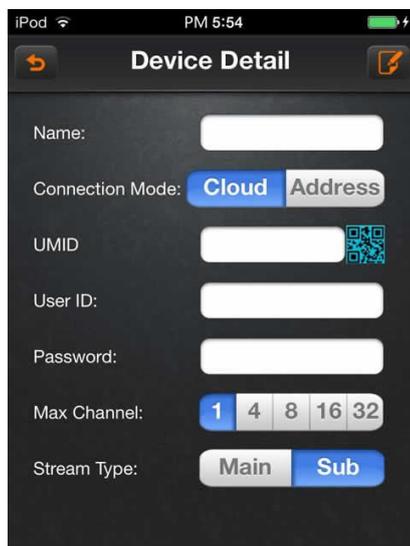

Icon instruction


Icon	Function instruction
	Open the camera and shoot the QR code to obtain the data.
	Save the device data
	Cancel to add the device.

6.1.5.6 Add the shot

Please see the operation introduction of "add devices".

6.1.5.7 Search the local device

Click on the icon to enter "search" dialog box. If there are some devices in local place, you would search out the corresponding device.

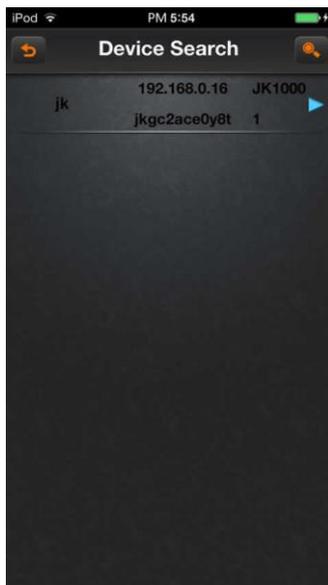

Icon instruction


Icon	Function instruction
	return to device management
	pop up the option of "add menu"
	search the device again

Click on the icon , then pop up the menu as follows:

- A) Add a device: add DVR (multi- channel)
- B) Add a shot: add a single camera (single channel)
- C) Modify the name: modify the name of the device or shot
- D) Modify IP: Modify the IP address, subnet mask, gateway information
- E) Modify the device password

6.1.6 Playback


Click button "playback" option in the main menu, and then select to playback the video.

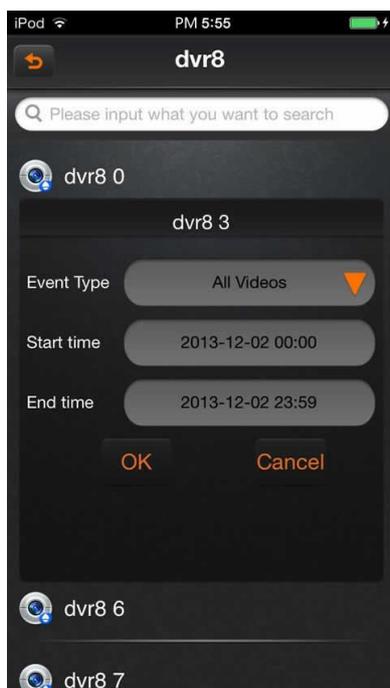

After select an event type, start time and end time, clicking on the  will list out the remote video lists, and then click on the item will be selected to play or download videos.

6.1.7 Alarm management

Click the option of "alarm management" in the main menu

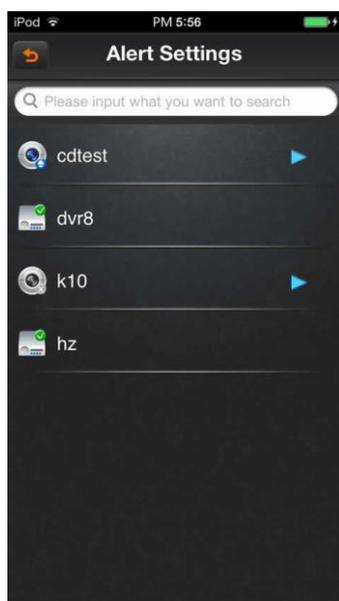


Icon instruction:

Icon	Function instruction
	No guard
	Guarded
	Click the pop-up menu options

6.1.7.1 Guard

Click on the icon  to select "guard" option, pop up the dialog box as follows:

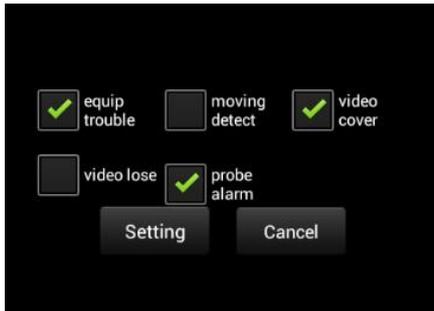


Select the option those need to alarm and click the button "setup" to save the current settings; Click the button "cancel" to cancel the current settings.

6.1.7.2 Unguard

Click on the icon  to select the button "unguard", cancel the current camera setting.

6.1.7.3 Note


Click on the icon to select "note" option , and then pop up the dialog as follows:

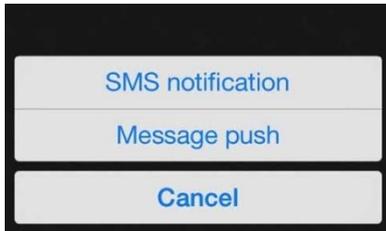

A) SMS notification: set the cell phone number of alarm notification

B) News push: open/ close the news push setting

In the notification interface, and then into "SMS notification" interface

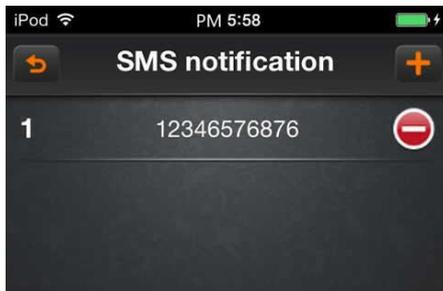


Icon instruction

Icon	Function instruction
	return to the alarm management
	Add the number of SMS
	Delete the current number

6.1.7.4 Record

Click on the icon to select "record" option , and then pop up the dialog of "alarm record"

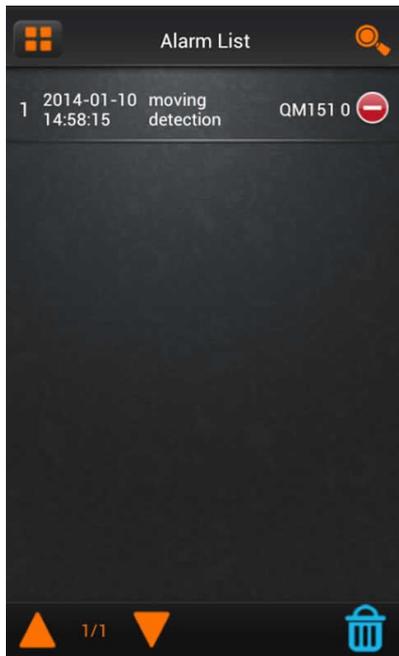


The icons instruction


Icon	Function instruction
	return to the alarm management
	search the alarm record
	page up
	page down

6.1.8 Local playback

Click on "local playback" option in the main menu, and then into the interface as follows

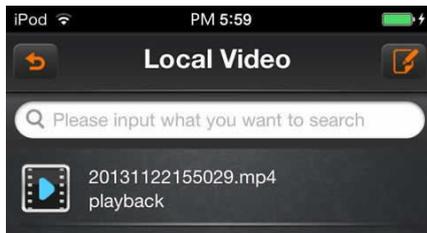

Click on the icon , the local playback video list change to editing states.

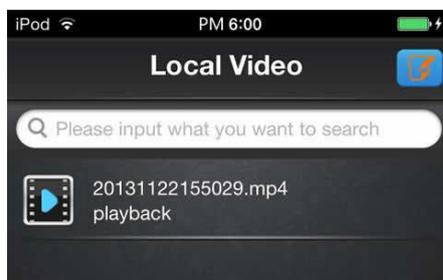

Select the video options that you want to delete, and then click the icon ; you can delete the selected local video.

6.1.9 Image view

Click on "images browsing" option



Click on the icon , the local playback video list change to editing states.



Select the image options that you want to delete , and then click on the icon to delete the selected local images.

6.1.10 Modify password

Click on "modify password" option in the main menu, and then into the interface as follows:



Click on the icon to save the current modified password .

6.1.11 Local configuration

Click on "local configuration" option in the main menu, and then into the interface as follows




Function instruction:

Function	Instruction
PTZ length	The camera rotation rate setting
Do not disturb	Alarm Info Tips switch
Alarm voice	Close the alarm voice

Click on the icon to save the current configuration. 


6.1.12 Help

Click on "help" option in the main menu, and then into the interface as follows

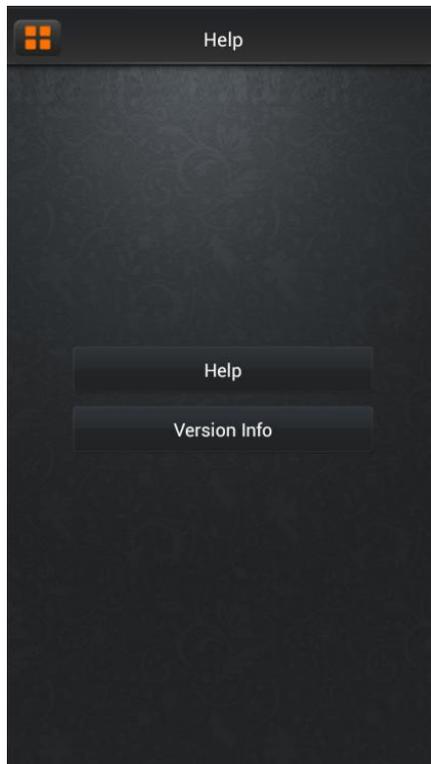


6.1.12.1 Help

Click on the button " Help" , and then into the interface as follows

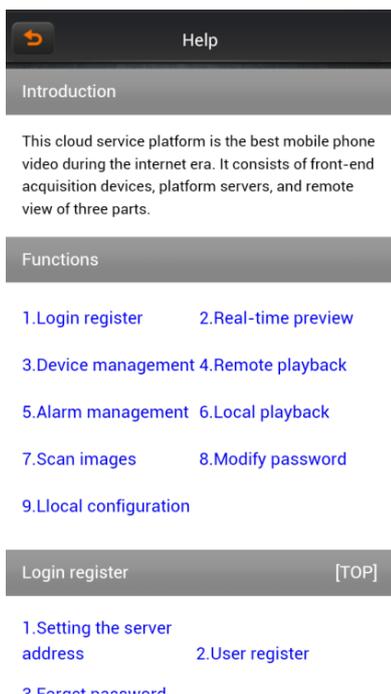

6.1.12 Login out

Click on "login out" option in the main menu, and then into the interface as follows

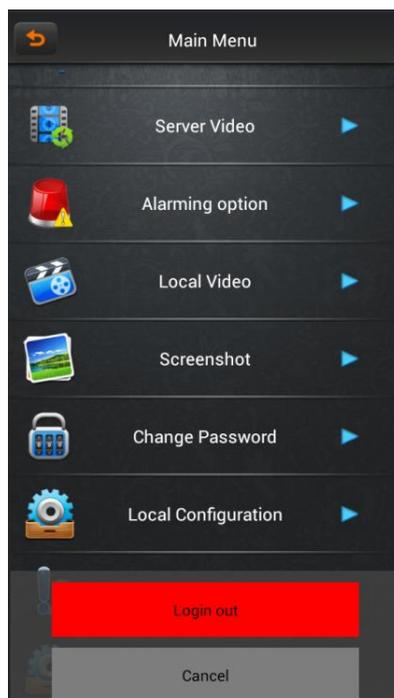

Function instruction:

Function	Instruction
Login out	Log off the current user
Cancel	Cancel log off the current user

6.2 Instructions of iPhone

6.2.1 Essential condition

- 1) Support the version ios5.0 to ios7.0 of iPhone system.
- 2) Support DVR platform versions:

Hisilicon v2.0.0.81 and higher.

6.2.2 Installation and operation instructions

Installation

Support two installation modes and the user can choose one way for installation.

1. Install online

Run the App Store program of iPhone.

Switch to the search tag page, and input QMEYE in the search box to find the application installation package, then click <install> .After finishing installation, there will be QMEYE program icon on the mobile phone desktop.

2. Install offline

Copy the QMEYE.ipa installation package to Iphone mobile through cable. In the specified directory find out the corresponding .ipa, click the application installation, and there will be program icons after finishing installing.

6.2.3 Login register

6.2.3.1 Login interface

Open the software into the login interface, inputting the username and password and click button "login", then it will be login the application.




Icon description:

icon	Function description
	After select, it will go directly to the main menu when you log in again.

6.2.3.2 User register

Click the button "register" on the login menu, then will jump to the register interface.

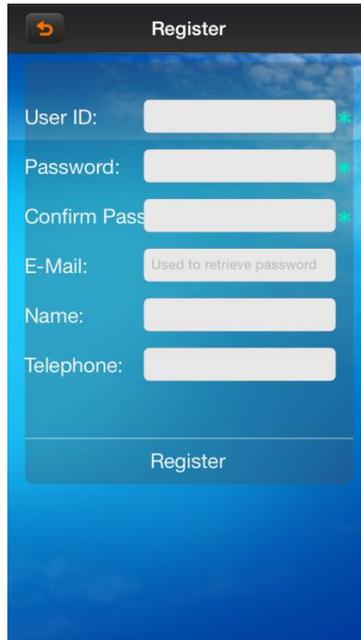

Enter the register information, click “register” then will be registered.

Note: please enter the valid E-mail address in order to retrieve your password when you lost it.

6.2.3.3 Retrieve the password

On the register clicking the button “login” and jump to “Retrieve password” interface.




Input the username, click button “retrieve password”.

If you have entered your name and email address when registering and the username has been occupied, then “retrieve password” information will be sent to the email address.

6.2.4 Real-time preview

In the main menu, clicking “real-time preview

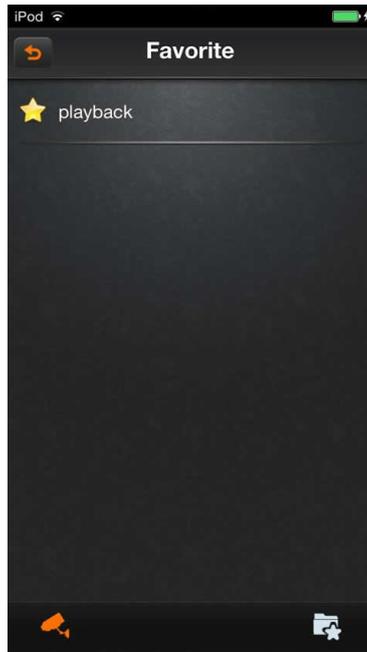

Click "Favorites" button, go to "collection management" interface
 Select one of the devices on "Live list" enters the video preview interface.




Button instruction:

icons	function instruction
	return to main menu
	move to the left
	move to the right
	move down
	move up
	enlarge
	narrow
	zoom out

	zoom in
	aperture enlarge
	aperture narrow
	start/ close intercom
	start/ close speakers
	stop/ start
	snapshot
	start / close the local video
	favorites
	channel switcher

6.2.5 Device management

Click the button "device management" on the main menu and enter "device management" interface.

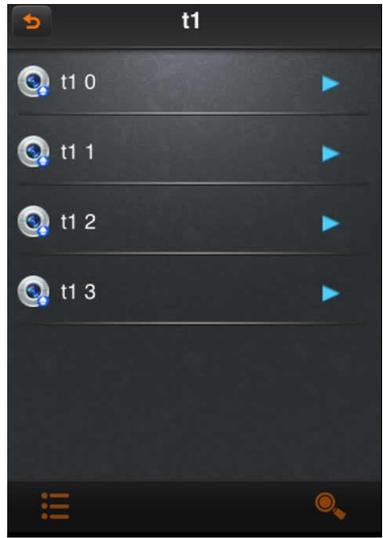


Icon instruction:

Icon	Function instruction
	return to the main menu
	click on the pop-up menu, such as modifying parameters, name options
	shot
	catalogue
	device
	after pop-up, add the catalogue, device and shot menu
	search the local shot

6.2.5.1 Modify the connection parameter

Click on the icon , select "modify connect parameter", then into "modify device" dialog box:

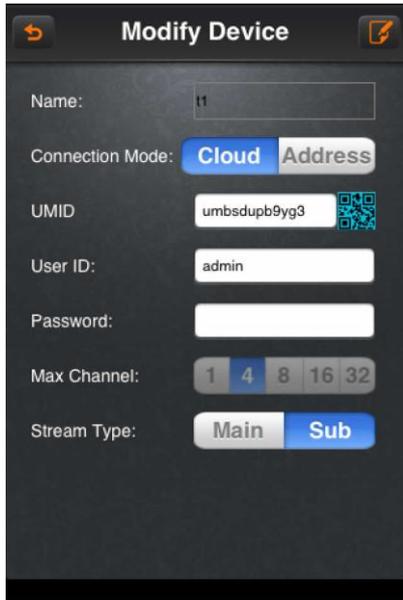

- A) Click on the icon  return to the device management lists.
- B) Click on the icon  save the current configuration.

6.2.5.2 Modify the name

Click on the icon , select the option "modify the name", then pops up "modify name" or "modify the catalogue" dialog box.




- A) Click "OK" button to save the current configuration.
- B) Click "cancel" button to cancel the modifying.

6.2.5.3 Delete

Click on icon , select "delete" button to delete the current device directly

6.2.5.4 Add the catalogue


Click on icon , select "add the catalogue" option, then pops up "add the catalogue" dialog box

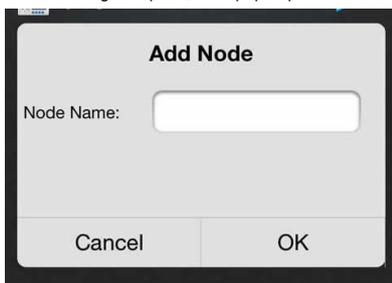

- A) Click "OK" button, it will be saved the current configuration. Then will be showed in the device management list.
- B) Click button "Cancel" to cancel to add the catalogue.

6.2.5.5 Add the device

Click on the icon to select "add the device" option. 

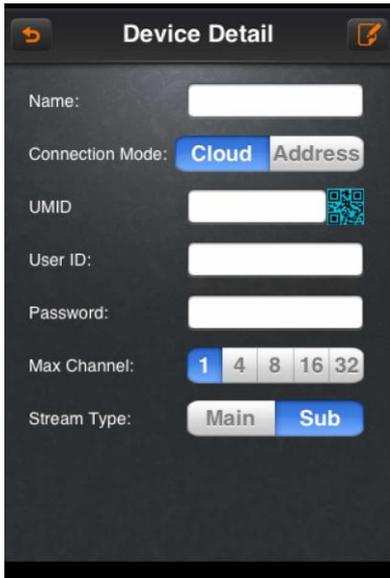

Icon instruction


Icon	Function instruction
	Open the camera and shoot the QR code to obtain the data.
	Save the device data
	Return the main menu

6.2.5.6 Add the shot

Please see the operation introduction of "add devices".

6.2.5.7 Search the local device

Click on the icon to enter "Device search" dialog box. If there are some devices in local place, you would search out the corresponding device. 

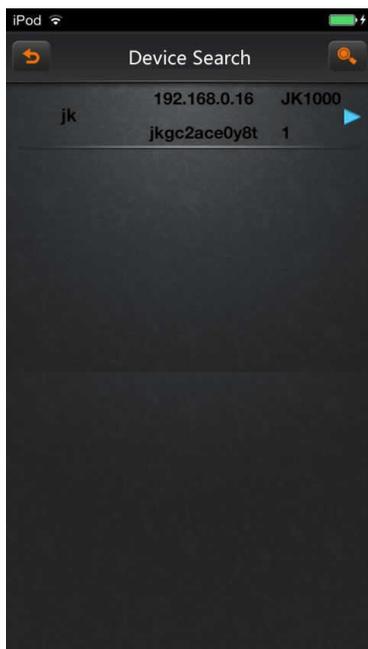

Icon instruction


Icon	Function instruction
	return to device management
	pop up the option of "add menu"
	search the device again

Click on the icon , then pop up the menu as follows:

- A) Add a device: add DVR (multi- channel)
- B) Add a shot: add a single camera (single channel)
- C) Modify the name: modify the name of the device or shot
- D) Modify IP: Modify the IP address, subnet mask, gateway information
- E) Modify the device password

6.2.6 Playback


Click button "playback" option in the main menu, and then select to playback the video.

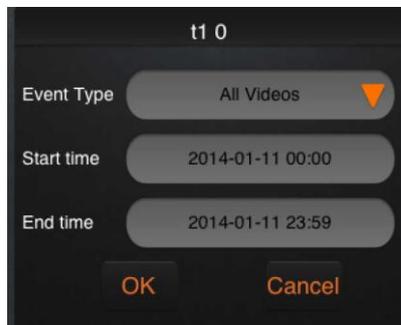

After select an event type, start time and end time, click the button OK will list out the remote video lists, and then click on the item will be selected to play or download videos.

6.2.7 Alarm management

Click the option of "alarm management" in the main menu

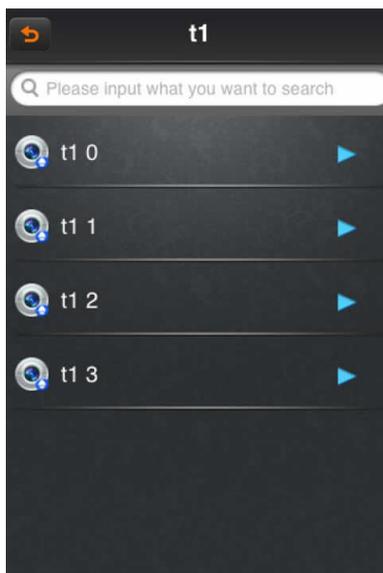


Icon instruction:

Icon	Function instruction
	No guard

	Guarded
	Click the pop-up menu options

6.2.7.1 Guard

Click on the icon  to select "guard" option, pop up the dialog box as follows:

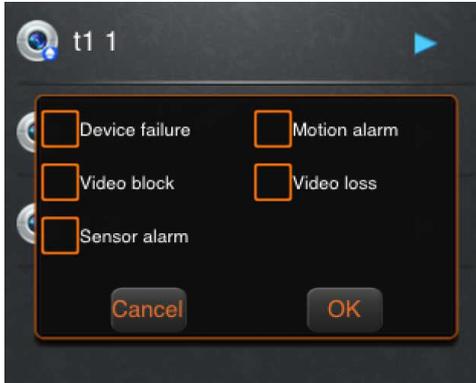

Select the option those need to alarm and click the button "OK" to save the current settings; Click the button "Cancel" to cancel the current settings.

6.2.7.2 Unguard

Click on the icon  to select the button "unguard", cancel the current camera setting.

6.2.7.3 Note


Click on the icon to select "note" option , and then pop up the dialog as follows:



A) SMS notification: set the cell phone number of alarm notification

B) Message push: open/ close the news push setting

In the notification interface, and then into "SMS notification" interface

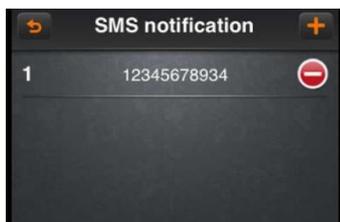


Icon instruction

Icon	Function instruction
	return to the alarm management
	Add the number of SMS

	Delete the current number
-----------------------------------------------------------------------------------	---------------------------

6.2.7.4 Record

Click on the icon to select "record" option , and then pop up the dialog of "alarm record"

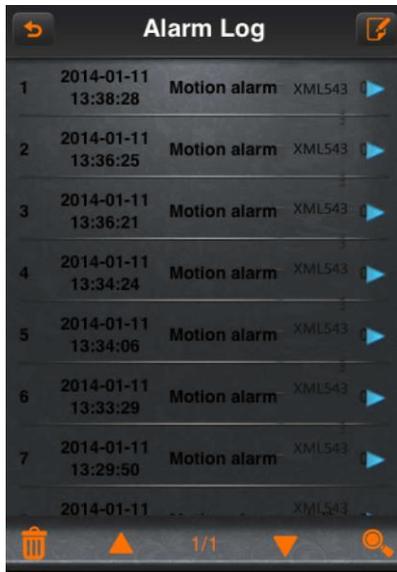


The icons instruction

Icon	Function instruction
	return to the alarm management
	search the alarm record
	page up
	page down

6.2.8 Local playback

Click on "local playback" option in the main menu, and then into the interface as follows

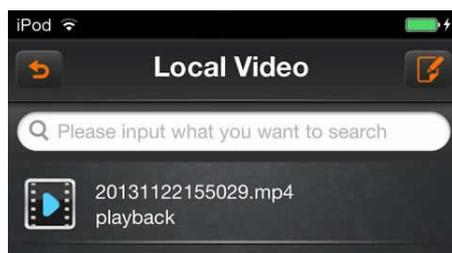

Click on the icon , the local playback video list change to editing states.



Select the video options that you want to delete, and then click the button "delete"; you can delete the selected local video.

6.2.9 Image view

Click on "images browsing" option



Click on the icon , the local playback video list change to editing states.



Select the image options that you want to delete, and then click on the button delete to delete the selected local images.

6.2.10 Modify password


Click on "modify password" option in the main menu, and then into the interface as follows:



Click on the icon  to save the current modified password.

6.2.11 Local configuration

Click on "local configuration" option in the main menu, and then into the interface as follows

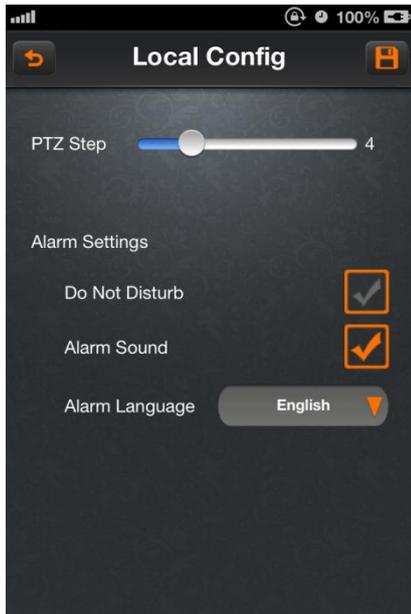

Function instruction:

Function	Instruction
PTZ length	The camera rotation rate setting
Do not disturb	Alarm Info Tips switch
Alarm voice	Close the alarm voice
Alarm language	Alarm push language

Click on the icon  to save the current configuration.

Chapter Seven FAQ (Frequently Asked Questions)

- 01: Why the DVR did not run after connect the power supply?

 - ① Please check the power switch turn on or off at the rear panel of DVR.
 - ② Please check if the turn on DVR operation correct or not?
 - ③ If you select the adaptor +12V, 5A or above? (8ch 5A, 16ch 220V 200W)
- 02: Still stop over on the boot-strap frame?

 - Physical damaged in hard disk drive
 - Boot manager abnormal.
- 03: Why does appear the boot running too slow?

 - ① There are too much capacity data in hard disk drive, the system will automatic search the data when the system boot up, caused the boot running slow.

☛ ②The hard disk drive error will cause the system research the data repeatedly, caused the boot running slow.

04: Why does the system reboot repeatedly?

- ①Check the hard disk drive, if there is not the FAT32 formatted in it or the problem in it and caused the DVR reboot;
- ②Please check the power supply of DVR, if you installed a lot of hard disk drive, it may be reboot repeatedly underpower;
- ③Please pull up the network cable, then to check the DVR can work normally or not, being the catastrophe failure in network, it will cause the DVR reboot repeatedly;

05: Why does the system halted of DVR during the playback and search the video file information in progress?

- ☛ Please check if you install the hard disk drive or if the drive is ok or not? Please replace the good one for it soon;
- ☛ If the ambient temperature on the high side or not?
- ☛ Is there any heaven current installation surrounding and external video device, heavy current surging video cable, caused the DVR can not work properly and the system halted;

06: Firmware upgrade failure?

- ☛ U drive is not good compatible with the DVR, cause the DVR can not detected it, suggested to try one or two more different kind of U drive in the market;
- ☛ USB interface is not good;
- ☛ The voltage hunting fearfulness during the system firmware upgrade in progress;

07: Why the display color is black and white in TV and VGA monitor?

- ☛ Check the video system is it matching the video input, DVR, TV or VGA monitor, if there is not on all fours, please set the video system mode in auto automatic recognition;

08: Why does nothing display on the TV or VGA monitor?

- 一、 ①please make sure if the power supply of TV or VGA monitor turn on or not; if the illumination located in the lowest status?
- 二、 ②if the video connected with TV or VGA monitor properly? Check if there is any video signal input? And make sure the line faulty or not?

09: Why does the video like water wave, to appear obstruction distortion?

- ☛ ①if there is short circuit, open circuit or insufficient solder and connection failure of video cable?
- ☛ ②If the video cable obstruction by high voltage interference, please separate the video and high voltage in linkup cabling, at the meantime, please select the better quality, shield video cable for the project;
- ☛ ③In the whole system, only select the central point to grounding, please do not multi port to grounding, then, cause the common mode obstruction, please connect the screw in DVR rear panel to grounding;
- ☛ ④Check if there is the become old problem in the camera or TV monitor and cable?

10: Why do the color of live video and record video data distortion?

- 1、 ①Make sure the input and output video parameter of main menu setting correct;
- 2、 ②Make sure the connection is correct;

11: Why does the video skew became deformed, color cast?

- ◆ ①Make sure the VGA cable and DVR be connected with grounding properly;
- ◆ ② The DVR working atmosphere temperature high, or no good in radiating, cause the VGA chipset working exceptional, or the mention circuit parameter is abnormal;

12: Why does the record video playback in mosaic under local DVR?

- ☛ ①The recording parameter setting is too low cause the record video quality overall down, sometime appears to mosaic;
- ☛ ②The record video file locates where there is a bad sector in a hard disk drive, it will cause the mosaic raising;

Enjoy the use of your Conceptronic CCTV!