



Upgrade FW Manual

WiFi HD Action Camera

CACTIONCAM



V1.0

Step

This manual is using for upgrade firmware when you need to use for car recorder version.

How to update U30R firmware (Step):

1. Download latest FW via the link:
 2. Copy the downloaded file to root directory of Micro SD card.
 3. Put Micro SD card into U30R then power on the machine, back LED indicators will flash in sequence.
 4. Press record key, back LED indicators will flash in the same time.
 5. Waiting for around 1min (machine will reboot one time), back LED indicators will turn into steady bright then please turn off the machine.
 6. Put attached file "format_nand.txt" into root directory of Micro SD card then insert Micro SD card into U30R, power on.
 7. Waiting for around 1 min, front LED indicator will become steady bright.
 8. Press "Mode key" and "Record Key" in the same time for 5 seconds, back LEDs will flash 3 times and machine will beep 3 times then Machine turn off automatically.
-