

CONCEPTRONIC®

The Concept of Global Communication

How-to install CBTU / CBT100U Windows XP Service Pack 2.




How-to use the CBTU / CBT100U with the Conceptronic Bluetooth software when Windows XP Service Pack 2 installed

If you have installed Service Pack 2 for Windows XP or your system came with a preinstalled Windows XP with Service Pack 2, you cannot use the Conceptronic Bluetooth software by default. The Conceptronic Bluetooth icon stays red when the Bluetooth device is inserted (Conceptronic software must be installed).



Please follow the numbers to install the Conceptronic Bluetooth device the correct way.

Go to device Manager (Start → Control panel → System → Hardware → Device manager)

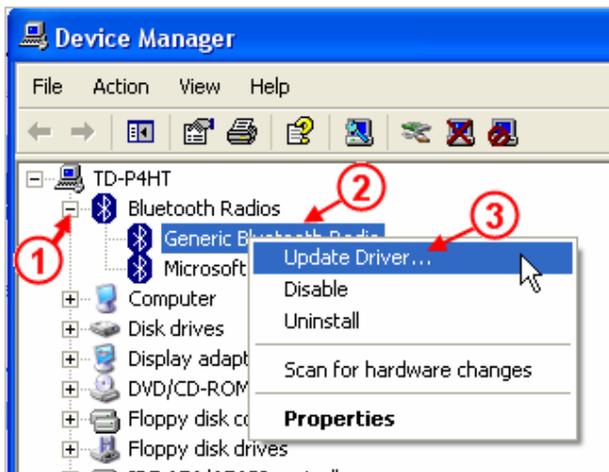

(1) Click on the (+) sign in front of “Bluetooth Radios”

(2) Right click “Generic Bluetooth Radio”


(3) Click “Update Driver...”



(4) Select “No, not this time”


(5) Click “Next”

How-to use the CBTU / CBT100U with the Conceptronic Bluetooth software when Windows XP Service Pack 2 installed

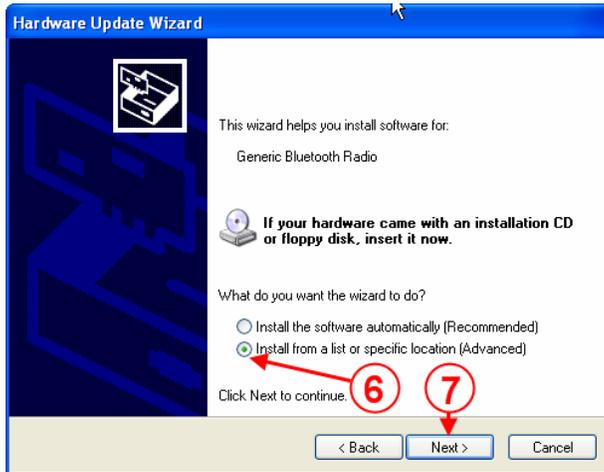


(6) Select “Install from a list or specific location (Advanced)”

(7) Click “Next”

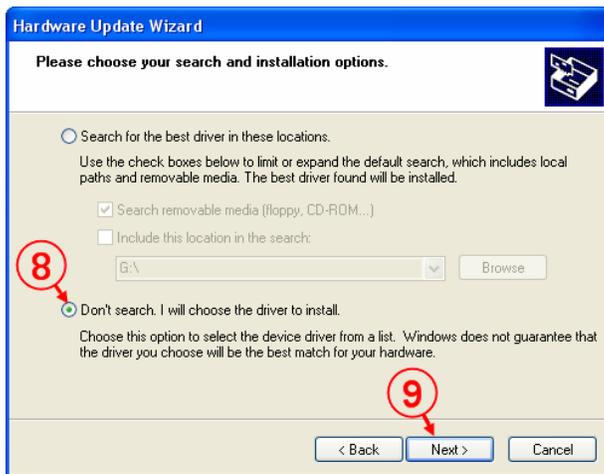

(8) Select”Don’t search. I will choose the drive to install”.

(9) Click “Next”

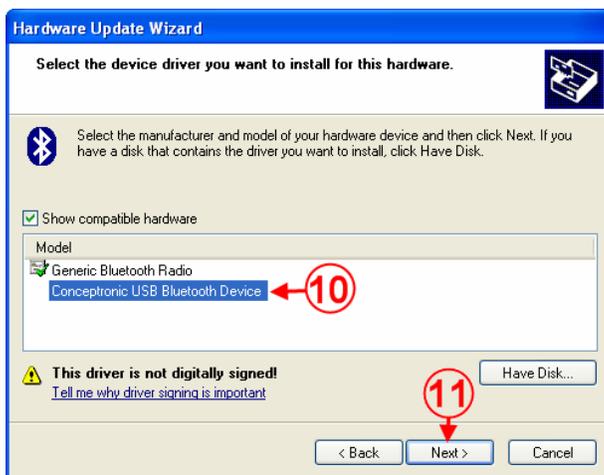

(10) Select “Conceptronic USB Bluetooth Device”

(11) Click “Next”


How-to use the CBTU / CBT100U with the Conceptronic Bluetooth software when Windows XP Service Pack 2 installed



(12) Click “Finish”



Your Conceptronic Bluetooth device is now recognized the correct way.

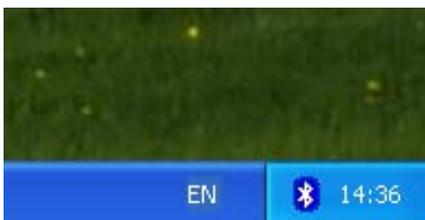

The Conceptronic Bluetooth icon is now white.